

Release Notes 2020

MIKE 11

Contents:

- [Introduction](#)
- [System Requirements](#)
- [Installation](#)
- [License File and dongle](#)
- [Product Invocation](#)
- [Support](#)
- [New features](#)
- [Fixed issues](#)
- [Known defects and workarounds](#)

Introduction

Welcome to MIKE 11 2020 Update 1

In this release note you will find information about new features of MIKE 11, and what you need to know in order to install and get started with Release 2020.

MIKE 11 is a professional engineering software tool for the simulation of hydrology, hydraulics, water quality and sediment transport in estuaries, rivers, irrigation systems and other inland waters.

System requirements

The recommended minimum system requirements are:

Fully supported Windows operating systems *	Windows 10 Pro, version 1909 (64 bit) Windows Server 2016 Standard (64 bit) Windows Server 2019 Standard (64 bit)
Processor	x64, 2.2 GHz (or higher)
Memory (RAM)	2 GB (or higher)
Hard disk	40 GB (or higher)
Monitor	SVGA, resolution 1024x768 in 16-bit color
Graphics adapter	64 MB RAM (256 MB RAM or higher recommended), 32-bit true color
File system	NTFS
Software requirements	Microsoft .NET Framework 4.7.2 or later

- * Fully supported operating systems are systems that have been tested in accordance with MIKE's Quality Assurance procedures and where warranty and software maintenance agreement conditions apply.

Installation

[top](#)

DHI License Management - If you are installing on a computer or server where you will also install the license file, please also install the DHI License Manager. It must be downloaded separately.

To install MIKE 11, please go to the MIKE Zero product folder and execute the setup.exe file either on the MIKE 2020 USB or from the downloaded, un-zipped installation files. Press the 'Install' button to begin installation.

The setup program will automatically install all necessary files and folders on your computer. Additionally, an entry is created in the Start Menu for MIKE Zero.

Important information: Please be aware that all MIKE software on the same computer must be installed with the same service pack. This is due to the dependencies between MIKE software products and the ability for the software to use the latest feature and systems updates.

License file and dongle

To use MIKE software in licensed mode, please refer to the DHI License Manager Release Notes. ([License Manager Release Notes](#))

Product invocation

Launch MIKE Zero from the Windows Start menu. Then you can select MIKE 11 from within the MIKE Zero Shell.

Starting any MIKE Zero application without a DHI configured hardware key and valid license files will cause the program to run in demo mode. If this happens, a message box will inform you during program initialization. When running in demo mode, the MIKE Zero installation supplies full access to all editors, computational engines and editing facilities. However, restrictions apply to the setups that can be executed as a model simulation.

Support

For general support, please refer to our [FAQ](#).

If you experience any difficulties, or if you have questions, please contact our Customer Success team by e-mail or phone:

Customer Success

DHI A/S
Agern Allé 5
DK-2970 Hørsholm
Denmark

mike@dhigroup.com

Tel: +45 4516 9333

You can also contact your local Customer Success team for support in your local language. A list can be found [here](#).

New features and fixed issues

[top](#)

Every new release of MIKE 11 consists of new modules, new features and/or corrections to problems or significant inconsistencies discovered in previous releases. There are no significant modifications in Release 2020 or Release 2020 Update 1.