



MIKE Zero

Installation Guide



DHI A/S Head Office

Agern Allé 5
DK-2970 Hørsholm
Denmark

+45 4516 9200 Telephone
+45 4516 9292 Telefax

mike@dhigroup.com
www.mikepoweredbydhi.com

PLEASE NOTE

COPYRIGHT

This document refers to proprietary computer software, which is protected by copyright. All rights are reserved. Copying or other reproduction of this manual or the related programs is prohibited without prior written consent of DHI A/S (hereinafter referred to as "DHI"). For details please refer to your 'DHI Software License Agreement'.

LIMITED LIABILITY

The liability of DHI is limited as specified in your DHI Software License Agreement:

In no event shall DHI or its representatives (agents and suppliers) be liable for any damages whatsoever including, without limitation, special, indirect, incidental or consequential damages or damages for loss of business profits or savings, business interruption, loss of business information or other pecuniary loss arising in connection with the Agreement, e.g. out of Licensee's use of or the inability to use the Software, even if DHI has been advised of the possibility of such damages.

This limitation shall apply to claims of personal injury to the extent permitted by law. Some jurisdictions do not allow the exclusion or limitation of liability for consequential, special, indirect, incidental damages and, accordingly, some portions of these limitations may not apply.

Notwithstanding the above, DHI's total liability (whether in contract, tort, including negligence, or otherwise) under or in connection with the Agreement shall in aggregate during the term not exceed the lesser of EUR 10.000 or the fees paid by Licensee under the Agreement during the 12 months' period previous to the event giving rise to a claim.

Licensee acknowledge that the liability limitations and exclusions set out in the Agreement reflect the allocation of risk negotiated and agreed by the parties and that DHI would not enter into the Agreement without these limitations and exclusions on its liability. These limitations and exclusions will apply notwithstanding any failure of essential purpose of any limited remedy.

CONTENTS

MIKE Zero Installation Guide

1	Introduction	1
2	Installation	2

1 Introduction

This installation guide describes the MIKE Zero installation process. MIKE Zero is the common user interface for pre- and postprocessing of data and models related to many of the MIKE Powered by DHI products for hydraulic and hydrological modelling. Figure 1 showing as below summarizes present, relevant products.

MIKE Zero Product
LITPACK
MIKE 21
MIKE 21C
MIKE 3
MIKE Animator Plus
MIKE HYDRO Basin
MIKE SHE

Figure 1 MIKE Powered by DHI products within the MIKE Zero user interface

MIKE Zero is the framework for the MIKE Powered by DHI products above, and you can select to install any of these from the MIKE Powered by DHI download page from this link: <https://www.mikepoweredbydhi.com/download/mike-2024>. You can also follow the video tutorial from this link [KA-01001 - DHI Customer Care Portal \(dhigroup.com\)](#).

The download packages for each of the MIKE Zero products are identical and it is your license purchase agreement with DHI that ultimately determines which computational engines you can use in full. In case your license does not include a certain product, you will receive a DEMO mode message when attempting to make use of that product.

2 Installation

Please follow the instructions below to install the MIKE Zero framework.

1. Unzip the downloaded archive in a local folder of your choice, right-click on the MIKE Zero *setup.exe* file, and select **Run as Administrator**.

NOTE: It is strongly recommended to install using the **Run as Administrator** command. This action temporarily inactivates the Microsoft Windows User Account Control (UAC) settings and facilitates successful installation and registration of all components MIKE Zero requires completely and correctly.

2. The installation Welcome screen appears. Click **Next** See

Figure 2.

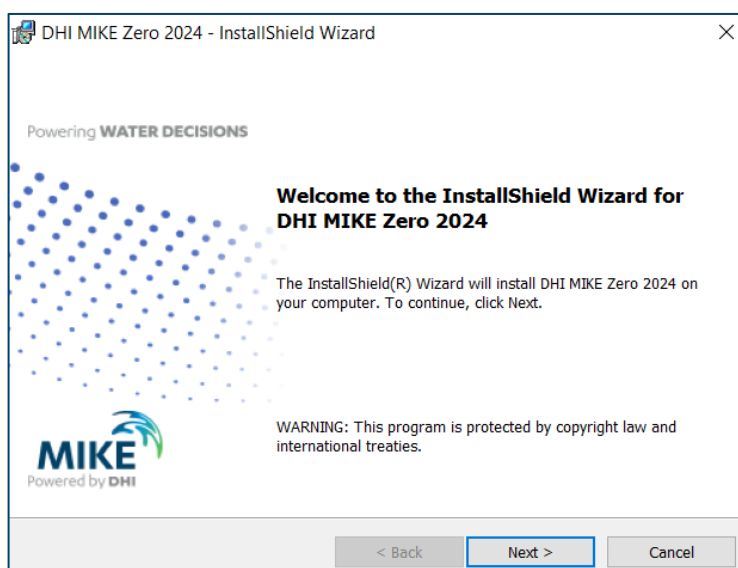 


Figure 2 MIKE Zero Welcome screen appears

3. Review and accept the terms. Please make sure to scroll all the way down, then click **Next** to proceed to the *Custom Setup* dialog. See Figure 3.

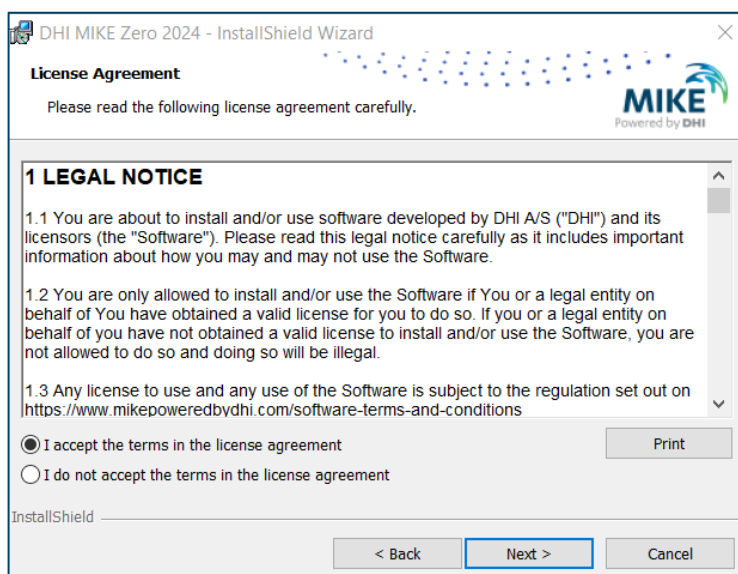 


Figure 3 Accept the legal agreement

4. In the **Custom Setup** dialog, you can select specific features to install. However, the default MIKE Zero installation configuration includes what you need in almost all cases. This is also why you see an additional **0KB** space requirement in the dialog when, for example, highlighted when installing MIKE 3. See Figure 4

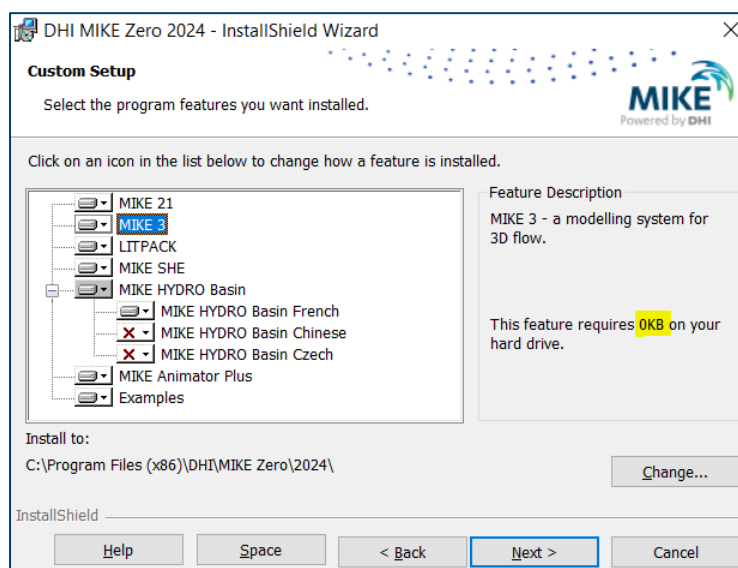 


Figure 4 Select Custom Setup

If you have purchased a MIKE HYDRO Basin license, you have the option to install additional language support. (This is a feature exclusive to MIKE HYDRO Basin.) See Figure 5.

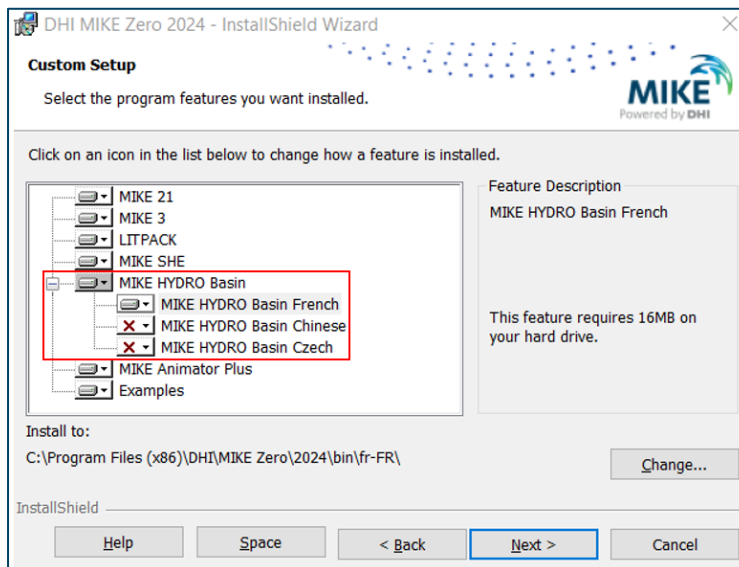 


Figure 5 Select language options for a specific product

Finally, the model files including **Examples** option are installed by default, and this requires approximately 1 GB of additional hard drive space. This resource is optional and it can be deselected or set to be installed on another available resource in accordance with the IT-policies of your organization. See Figure 6.

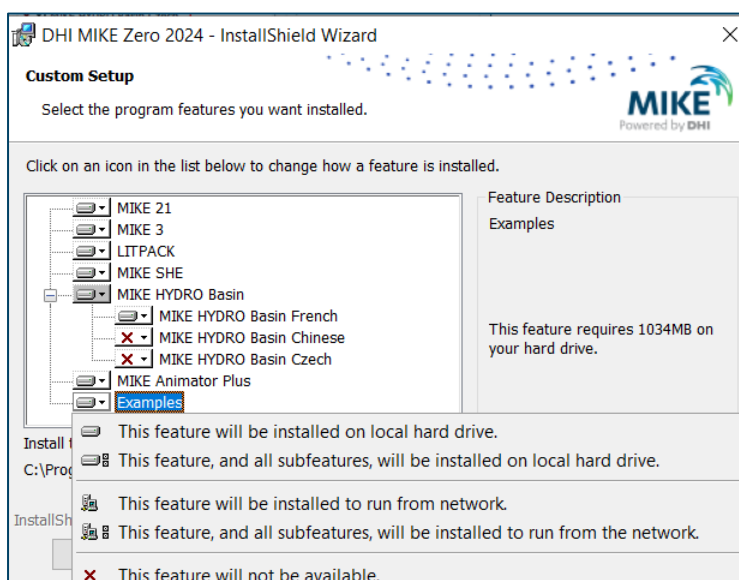 


Figure 6 Installing examples

In case of storage space concerns, click **Space** to view a summary of free storage capacity on all drives available to your system. Click **OK** to return to the main wizard process. See Figure 7.

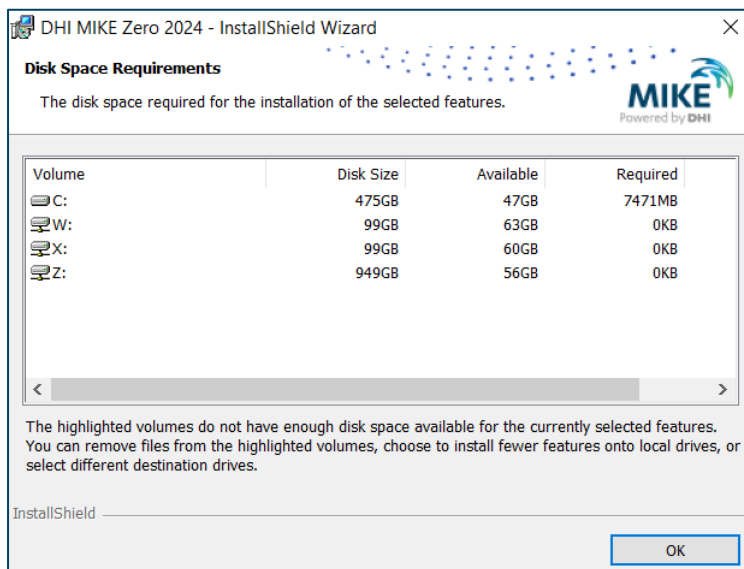 


Figure 7 Space requirements

5. Click **Next**, to open the **License selection** dialog. Select the option that applies to your license type.. You can always change this at a later stage through the DHI License Manager, which you find under the **DHI License Administration** program group in the Windows Start menu once the MIKE Zero Installation is complete. Under the same group, you also find a link to the web resource as **DHI License Manager Documentation Index**. See Figure 8.

NOTE: in case you use a USB hardware key (dongle) to activate your MIKE Powered by DHI license, you have to download and install the **full DHI License Manager** to be able to read and register the license associated with the dongle in question. The dongle number is usually marked with the letters “MZ” followed by a 5-digit number. You can download the DHI License Manager installation package from this link: <https://www.mikepoweredbydhi.com/download/mike-2024>.

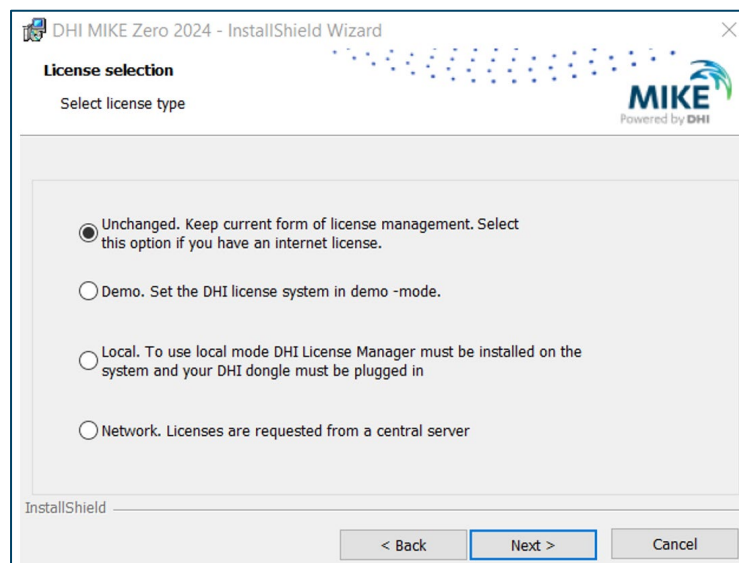 


Figure 8 Select license type

6. Click **Next** in to begin the installation process. Please be aware that it may take several minutes to complete. See Figure 9.

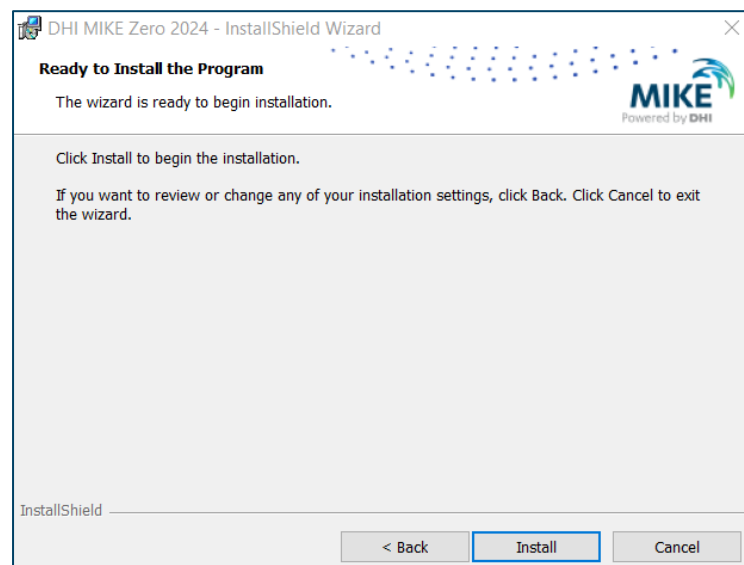 


Figure 9 Installation wizard is ready

A progress bar will keep you updated about installation status. See Figure 10.

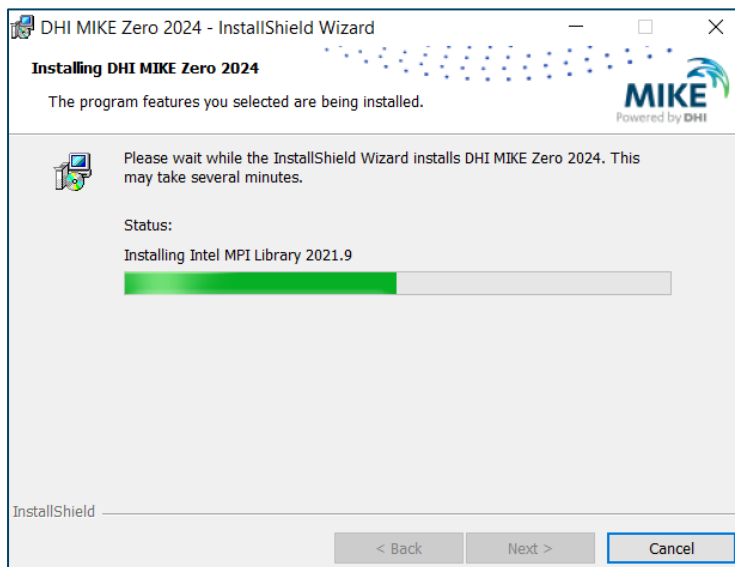 


Figure 10 Installation in progress

7. Once you receive confirmation that the installation is completed, click **Finish** to end the process. See Figure 11.

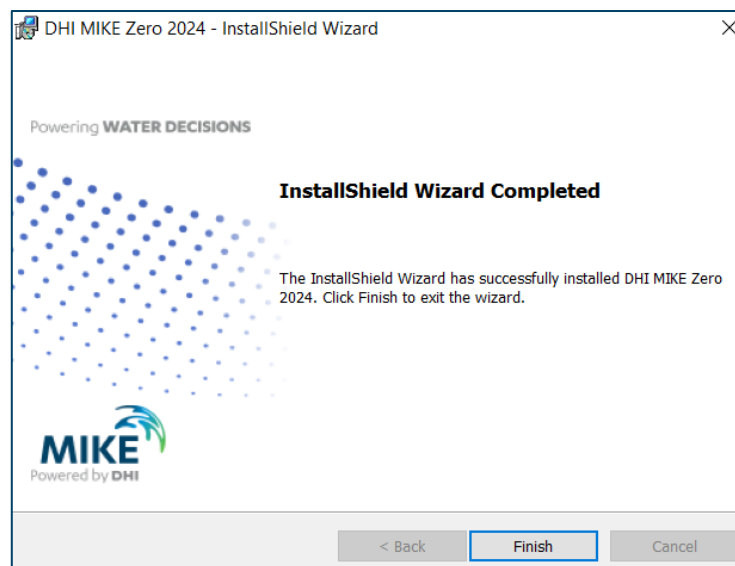 


Figure 11 Installation completed

8. Provided that licensing is properly configured, you are now ready to start MIKE Zero. Simply open the Microsoft Windows start menu and click **MIKE Zero** under the program group named **MIKE Zero 2024**. In case the license is not in place, please review your licensing options and make necessary adjustments in the **DHI License Manager**.

NOTE: Under the same program group, you will also find a link to the web resource **MIKE Zero Documentation**. Here, you find all related documentation in PDF format, for online reading or download at your convenience.