

MIKE ECO Lab – Agent Based Modelling

ABM Lab - Drifter Example

Step-by-step training guide



DHI A/S headquarters

Agern Allé 5
DK-2970 Hørsholm
Denmark

+45 4516 9200 Telephone
mike@dhigroup.com
www.mikepoweredbydhi.com

Company Registration No.: DK36466871

CONTENTS

MIKE ECO Lab – Agent Based Modelling ABM Lab – Drifter Example Step-by-step training guide

1	Introduction.....	1
1.1	Background.....	1
1.2	Objective.....	1
1.3	ABM Examples	2
2	Passive Drifter.....	3
2.1	Purpose	3
2.2	Files.....	3
2.3	Scenario	4
2.4	Parameters	5
2.4.1	Hydrodynamic parameters	5
2.4.2	Sources	5
2.4.3	Outputs.....	5
2.5	Creating the Particle Class ‘Passive Drifter’	6
2.5.1	Adding elements to address the flow information	7
2.5.2	Creating a new particle class.....	9
2.5.3	Creating class state variables.....	10
2.5.4	Creating class constants	11
2.5.5	Movement definition	11
2.5.6	Horizontal movement	11
2.5.7	Vertical movement	12
2.6	Model Setup of MIKE ECO Lab	14
2.7	Loading a template.....	14
2.7.1	The Eulerian framework	14
2.7.2	Class overview.....	15
2.7.3	Specifying class constants	15
2.7.4	Dispersion settings.....	16
2.7.5	Particle sources	16
2.7.6	Outputs mapping particle state variables into concentration maps	19
2.7.7	Outputs storing particle movement tracks	23
2.7.8	Model setup of PT module.....	24
2.8	Results.....	26
2.8.1	Adjusting the track overlay	28

1 Introduction

1.1 Background

Definition: ‘Models describing the (autonomic) behaviour and states of agents, objects or individuals’

Agent Based Modelling, in short ABM (or synonymously ‘Individual Based Modelling’, IBM) is a relatively recent development. As Grimm and Railsback¹ point out, ‘classical theoretical ecology...usually ignores individuals and their adaptive behaviour’.

Ecosystems are commonly seen from a process based view, following the fate of masses or concentrations in the system. Such process orientated modelling is done by describing the flow between different components and the associated process. It is a well-established and proven method and usually the first choice if you want to simulate dissolved substances e.g. oxygen concentrations, BOD levels, pollutants or phyto- or zooplankton distributions on a larger scale.

Many phenomena, however, cannot be described satisfactory using such process orientated models. For example it is well known that plankton organisms that are subject to passive transport by the water currents may show an explicit diel or diurnal² vertical migration through the water column. In the ocean this vertical migration can span over several 100 m's. By feeding at the surface and defecating large pellets in deeper zones plankton organism can influence the transport of organic matter to deeper layers. If the flow patterns are different throughout the water column such movement will also affect the species distribution. ABMs can be used to describe and investigate such patterns by reproducing the observed movement of individuals (agents) and the resulting changes to the system.

The MIKE ECO Lab ABM module allows you to easily formulate agent based models within the MIKE FM series of hydrodynamic environments of the MIKE Powered by DHI framework. It combines the normal, process orientated MIKE ECO Lab framework with a Lagrange particle movement model.

It is assumed that the reader is familiar with ‘classic’ process orientated modelling in MIKE ECO Lab in the following text. In doubt consult the other MIKE ECO Lab manuals.

1.2 Objective

The objective of this Step-by-Step guide is to introduce the user to ABM modelling techniques in MIKE ECO Lab and features/elements of an ABM template.. A general understanding and experience with MIKE ECO Lab and the MIKE FM series is expected. In doubt, consult the according manuals.

¹ V. Grimm, S.F. Railsback; ‘Individual-based Modeling and Ecology’, Princeton University Press 2005

² Many plankton organisms migrate to feed in the euphotic zone near the surface and rest in the mesopelagic zone (or the hypolimnion in freshwater lakes) during a day cycle.

1.3 ABM Examples

The MIKE Zero installation contains some examples for Agent based modelling with MIKE ECO Lab, demonstrating various features of the MIKE ECO Lab ABM Lab module. It is advised to explore them in the order listed below. Each example introduces new features and options and assumes that the reader is familiar with the previous ones.

The following examples are available.

Example	Description
Passive Drifter	General introduction, comparing a standard particle tracking with a basic ABM template of a passive drifting agent
Vertical Movement	A pelagic plankton organism moving vertically in the water column triggered by local light intensity

A description of the first example ‘Passive Drifter’ can be found in Section 2.

2 Passive Drifter

2.1 Purpose

This example introduces the basic agent template. It creates a passive drifting agent class that is transported solely by the current. It has been designed to compare the results of the standard particle tracking module with a passive drifting ABM particle class. It demonstrates a very simple ABM model; nevertheless this simple passive drifting class demonstrates how to distribute an ABM particle class according to the environmental flow and this general movement is the base for almost all ABM particle classes.

Topics:

- Basic ABM features
- ABM state variables
- Movement vectors
- (Moving) point source

2.2 Files

The described example consists of the following files:

File	Description
Corner.mesh	Mesh file containing the environment definition (bathymetry, land, etc.)
Corner2D_HD.m21fm	Basic hydrodynamic setup for MIKE 21 FM
PassiveDrifter.ecolab	The final template for the described 'Passive Drifter' ABM particle class
Source_Location.dfs0	A time series with coordinates for the moving source coordinate definition
Compare_Corner_PT_ABM.m21fm Compare_Corner_PT_ABM.m3fm	The final MIKE FM setup to compare the ABM and classic particle tracking

2.3 Scenario

We want to follow the drift of individuals of a passive drifting ABM particle class. The model uses the same L-shaped channel with a constant depth as the introduction example in the particle tracking. The computational domain is shown in Figure 2.1.

- The channel is about 500 wide, with 1 km stretch on either side of the corner. The bottom is 20 m below datum.
- The flow goes from south to west with a current of approximately 0.8 m/s caused by a water level difference of 0.05 m between the open boundaries.
- Particles are released by a moving point source starting at the position (1250, 200), moving towards (1400, 200) at a depth of -5.04 m.

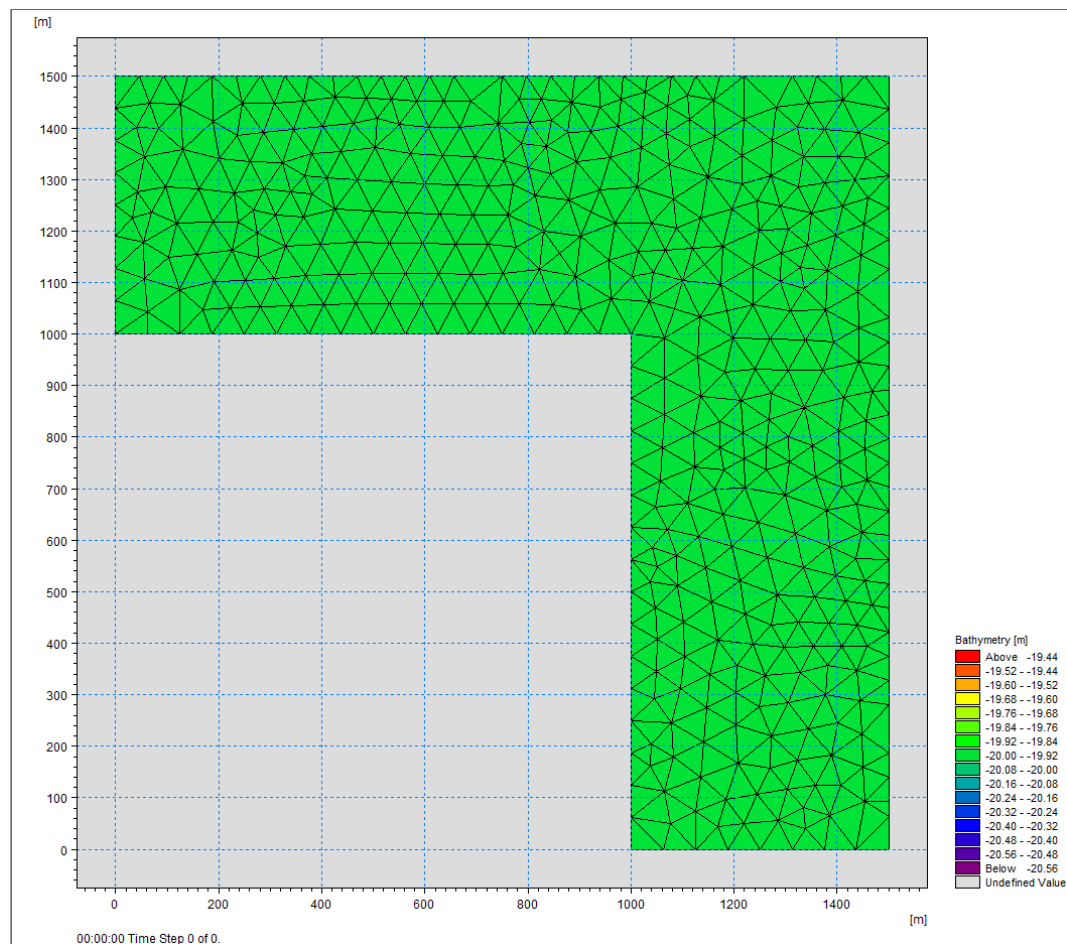


Figure 2.1 Model domain for the comparison of standard particle tracking and a passive drifting ABM particle class

2.4 Parameters

This section describes the main conditions defining the hydrodynamic problem.

2.4.1 Hydrodynamic parameters

- An unstructured mesh with 778 elements and 443 nodes is used. An overall time step of 60 seconds is selected, and the duration of the simulation is 3 hours (180 time steps in total).
- The horizontal eddy viscosity type has been chosen to Smagorinsky formulation with a constant value of 0.28.
- The bed resistance type has been defined by a constant Manning number of 32 [m^{1/3}/s].
- Initially the water surface level is 0.0 [m] in the entire domain.
- The upstream (south) boundary is defined by a constant water level of 0.05 [m] above datum. The soft start for this boundary is defined as by a sinus variation with a time interval of 900 s. The west boundary is defined by a constant water level held at datum (0 [m]).

2.4.2 Sources

We will use the same parameters as the ones in the particle tracking example. The release point will initially be located at (1250, 200, -5.04) and move to (1400, 200, -5.04) during the simulation.

2.4.3 Outputs

There will be an area and a track output for both the PT and the MIKE ECO Lab module. You might check the Particle Tracking User Guide for further details.

2.5 Creating the Particle Class ‘Passive Drifter’

We will create a simple class to define a basic passive drifting particle class. Create a new, empty MIKE ECO Lab template (Figure 2.2):

Either use the menu ‘File’→‘New’ or the ‘new item’ button on the upper left (1). This will open the new file dialogue of MzShell. Here navigate to the MIKE Zero category and select ‘MIKE ECO Lab’ (2) as file type and press OK (3).

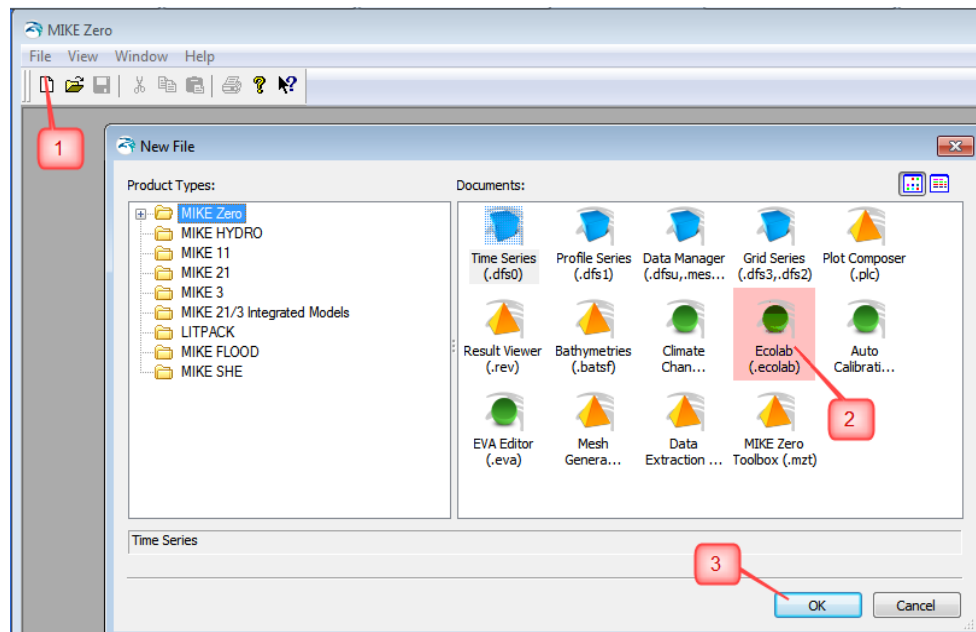


Figure 2.2 Create a new MIKE ECO Lab template by selecting the New File item icon (1), choose ‘MIKE ECO Lab’ (2) and press OK (3)

This will open a new, empty template in the MIKE ECO Lab template editor (see Figure 2.3). The editor window contains three major panes. On the left side a tree like navigation structure shows all currently defined elements. The right side shows a details pane for the currently active element. On the bottom pane messages like error messages and warnings will be listed.

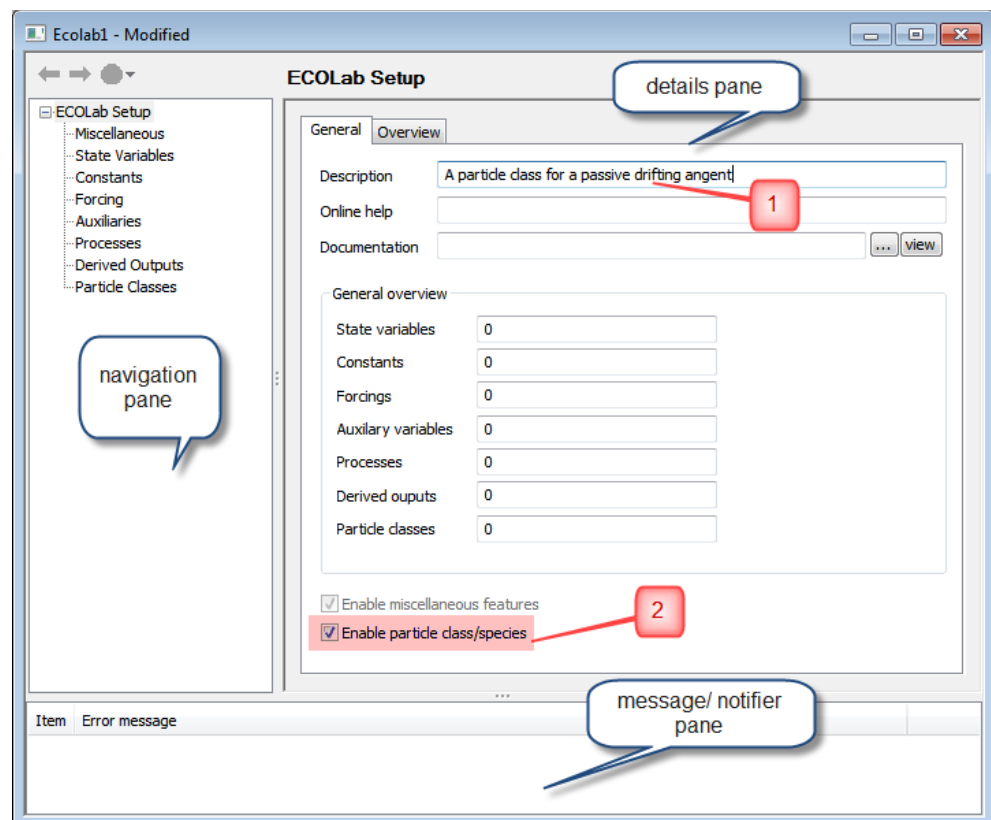


Figure 2.3 A new, empty MIKE ECO Lab template in the template editor. Provide a proper description (1) and enable the ABM features (2).

When you create a new template the general information page will be active and you can provide a short description (1) and links to more detailed documentation for the current template. If you want to define an ABM template enable the appropriate checkbox (2). This will add the 'Particle Classes' to the navigation tree. It is a good idea to save the new template as 'PassiveDrifter'.

2.5.1 Adding elements to address the flow information

Most ABM templates will need to address the flow field to move agents with the currents. The flow information is part of the Eulerian framework and is usually declared as a forcing. To create a new forcing use the context menu (right mouse button) in the left navigation pane inside the node labelled 'Forcing' and select 'Create new'. This will add a new forcing and open the details page for the new created element. Name it 'HSpeed' and provide information for description and the online help. To query the flow field from the hydrodynamic model select the built-in ID 'HORIZONTAL_CURRENT_SPEED' from the list of available built-in forcing. By selecting a built-in ID all necessary information for the other fields is set automatically. See Figure 2.4.

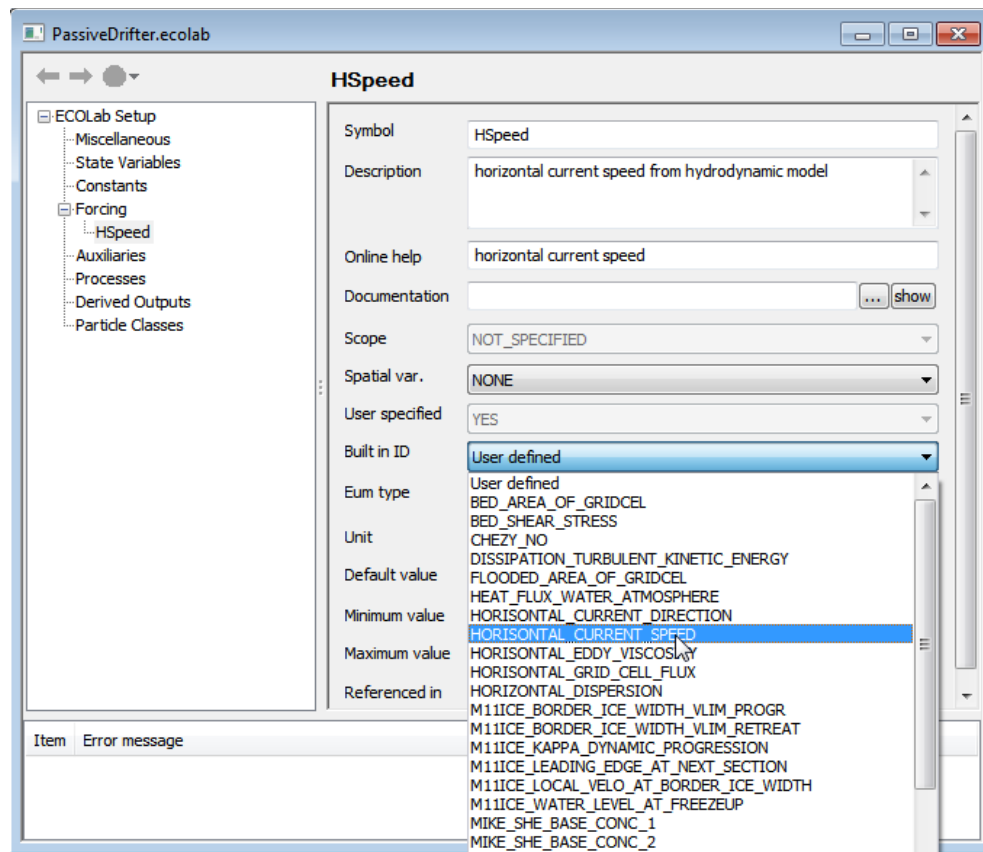


Figure 2.4 Adding forcing to read the hydrodynamic flow conditions

Create two more forcings called 'HDir' and 'VSpeed' and select:

- HORIZONTAL_CURRENT_DIRECTION, and
- VERTICAL_CURRENT_SPEED

According to Table 2.1 the information for the forcing will now be read from the hydrodynamic setup and corresponds to the calculated hydrodynamic flow.

Table 2.1 Forcing names and built-in IDs used to read the hydrodynamic flow conditions

Symbol	Built-in ID
HSpeed	HORIZONTAL_CURRENT_SPEED
HDir	HORIZONTAL_CURRENT_DIRECTION
VSpeed	VERTICAL_CURRENT_SPEED

2.5.2 Creating a new particle class

To create a new particle class activate the 'Particle classes' node in the navigation tree. This will open the details page for the particle classes. As up to now no particle class have been declared the page is empty.

The shown list is a generic element, available for all MIKE ECO Lab element categories. Elements in such a list can be added, removed (if not referenced) and moved up and down with the buttons in the upper right side. On the upper left side a chronic navigation toolbar allows you to quickly jump back and fore between already visited elements. Compare Figure 2.5.

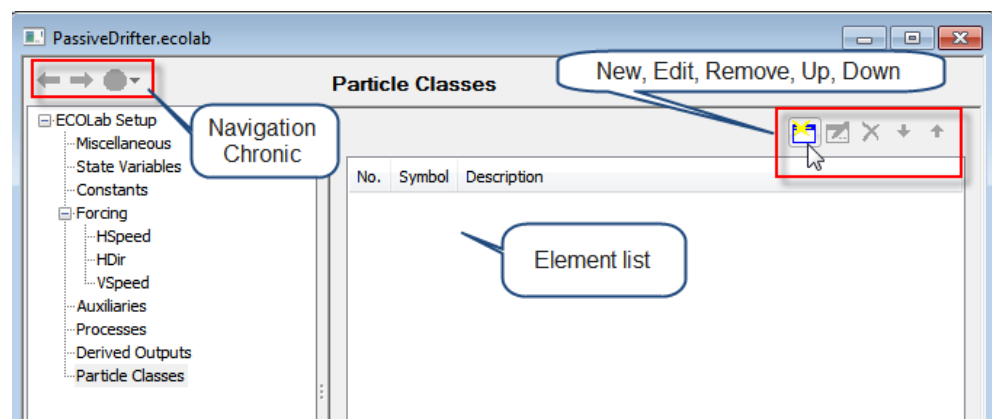


Figure 2.5 Creating a new particle class using the 'New' button

Use the 'New' button to create a new particle class with the default name 'Specie_1'. Rename it to 'PassiveDrifter' by changing its symbol name on the overview page. A new created particle class will not have any internal state variables, constants or arithmetic expressions but it has always at least one horizontal movement vector and a downward movement velocity definition.

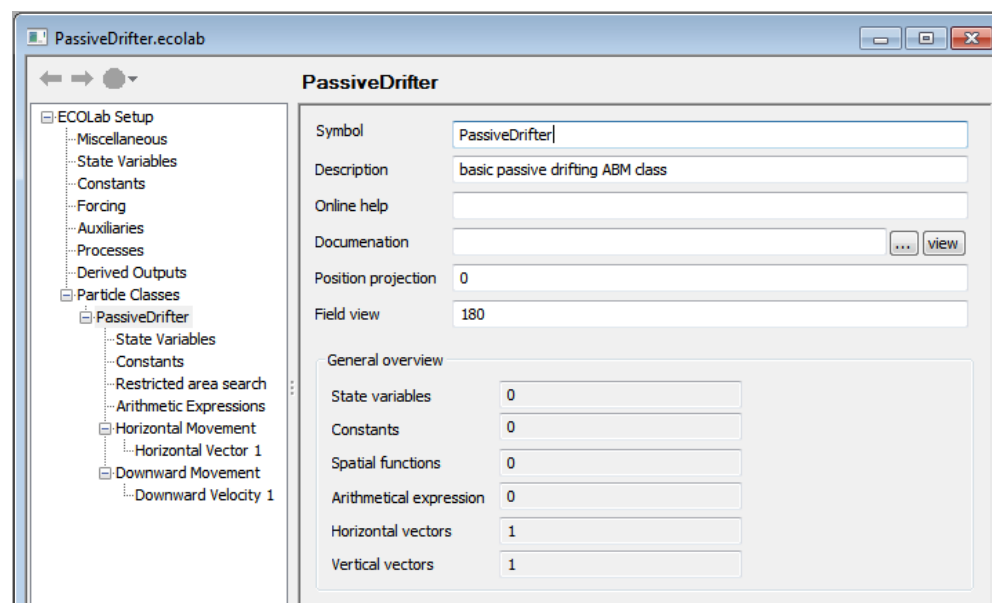


Figure 2.6 New created particle class with no variables

2.5.3 Creating class state variables

To be able to store some data like a particle mass and derive a concentration map from the particle distribution we add a simple state variable to the particle class.

You can use either the context menu on the 'State Variables' node in the 'Particle classes' section, or the 'New' button in the particle state variable list to do so.

First, you have to provide a symbol/variable name. This name will be used to address the value represented by the state variable in later MIKE ECO Lab expressions.

You should provide a good, catchy description text. This description will be used as annotation in the result files/plots and to identify the variable in the setup interface! Therefore it is good practise to repeat the symbol name together with a short description here. Lengthy documentations should be placed in an external file, linked to the 'documentation' field.

Furthermore, you can specify a EUM type³ from a list of predefined options. This will set the item unit; if no proper predefined EUM type is available, select 'User defined' and specify the unit manually. Please note that MIKE ECO Lab does not handle unit conversions automatically – you have to ensure that any calculation is done with the proper unit!

Do not forget to provide meaningful data for default, min and max values as this information will be used to validate the input data!

Finally, your input should look like the input shown in Figure 2.7.

The screenshot shows the 'PassiveDrifter.ECOLAB' window. On the left is a tree view with the following structure: ECOLab Setup > Miscellaneous > State Variables > Constants > Forcing > Auxiliaries > Processes > Derived Outputs > Particle Classes > PassiveDrifter > State Variables > Mass. The right pane is titled 'Mass' and contains the following fields:

Symbol	Mass
Description	Particle Mass, a conservative state variable
Online help	particle mass, a conservative state variable
Documentation	[empty] ... show
Eum type	Mass
Unit	kg
Default value	10
Minimum value	0
Maximum value	100
Referenced in	Not used !
Expression	0

Figure 2.7 Create a simple conservative state variable for the particle class; make sure that the process expression (rate of change) is '0'

³ EUM stands for 'Engineering Unit Management' and is the internal technique used for automatic unit conversion inside the MIKE products.

2.5.4 Creating class constants

Now create a new constant. This constant will specify the settling velocity of our particle class. Name it 'settling_v', set the unit to 'm/s'. Specify '0' as default value (no settling) and allow a minimum of '-10.0' and a maximum of '10.0'. This will enable us to assign positive and negative buoyancy to a particle. See Figure 2.8 for details.

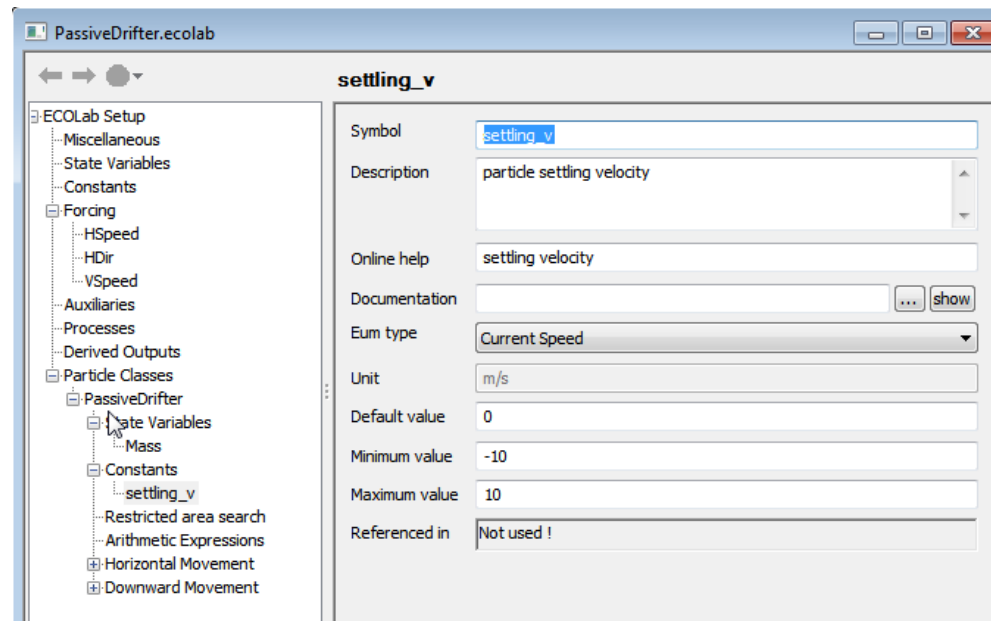


Figure 2.8 Definition of a constant used as settling velocity

2.5.5 Movement definition

Now we need to declare the movement rules of the simple particle class. An ABM particle/agent in MIKE ECO Lab can have up to 5 independent horizontal movement vectors and has one downward (settling) velocity. In this example we will specify the current flow direction and speeds that we have created as forcing in the first step. This will cause an individual from the particle class to be passively dispersed by the currents (through advection).

2.5.6 Horizontal movement

To do so open the first horizontal movement vector definition. We will use the horizontal flow speed and direction information to move an individual horizontally with the current flow. Enter the symbol name used for the current speed and direction in the corresponding fields (see Figure 2.9).

The expression you enter is checked/ verified when you move to another input field. If the editor recognises the entered symbol as previously defined, the text becomes blue with an underscore. This indicates a hyperlink and you can navigate to the definition (~input dialogue) of the element/symbol by using the right mouse button. In case of an error a

message will be printed in the lower panel. In case of an unknown symbol the editor offers the creation on a new symbol with a certain type to be selected from a list.

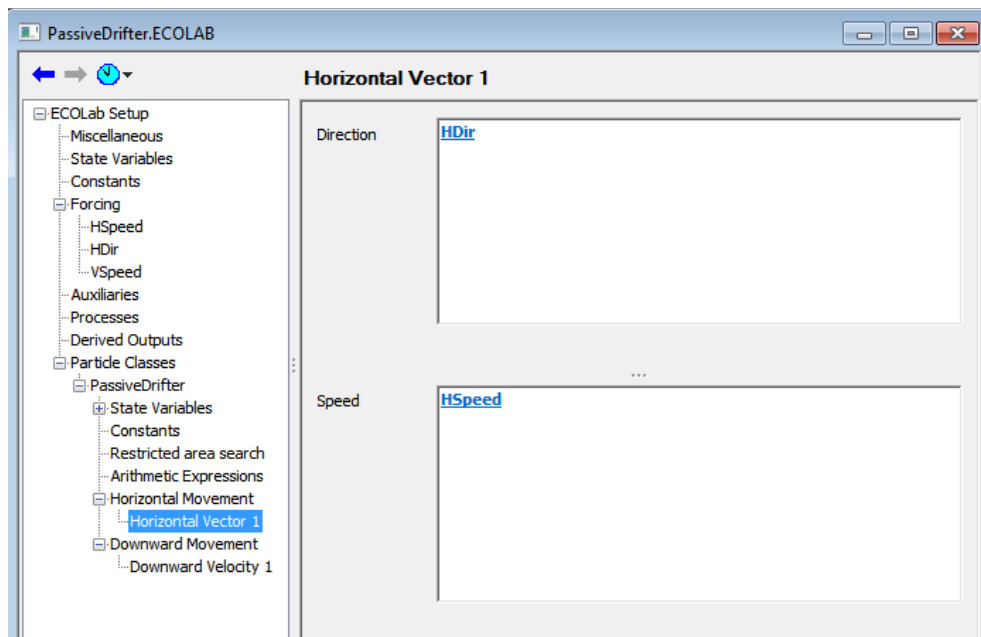


Figure 2.9 Defining the horizontal movement vector to make an individual follow the local currents

2.5.7 Vertical movement

Finally, we need to define the equation for downward movement. We have declared a settling velocity specified by the class constant 'settling_v'. Thus, we specify 'settling_v' as downward velocity. This will cause a particle to sink with the given speed.

In a 3D simulation up- or down-welling currents can influence the vertical movement. Similar to the horizontal transport we will therefore add the information from the forcing 'VSpeed' to move an individual according to the vertical flow. But compared with the settling process the vertical flow has an opposite sign; upward directed flow speed is positive and downward directed flow negative. To account for this the vertical flow speed from the hydrodynamic calculation has to be **subtracted** to compute the final settling velocity. See Figure 2.10 for details.

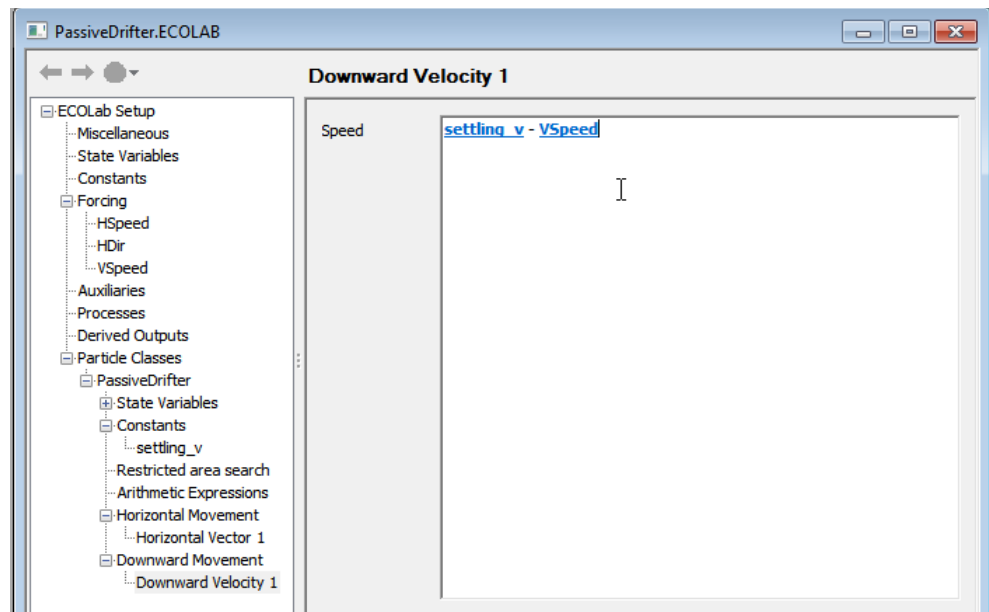


Figure 2.10 Defining the settlement of the particle class. See text why the vertical flow speed needs to be subtracted

ATTENTION: The forcing 'VSpeed' refers to the vertical current speed. The coordinate system for the current flow points upwards, meaning a negative flow speed indicates a downward direction whereas a positive value shows an upward directed flow. The vertical movement of a particle expects a downward velocity, i.e. a positive downward velocity causes a downward movement whereas a negative value indicates positive buoyancy and an upward movement. Thus the sign of 'VSpeed' needs to be negated to move a particle according to the vertical current flow.

Save the final template. It can now be used in a hydrodynamic setup.

2.6 Model Setup of MIKE ECO Lab

Open the hydrodynamic setup 'Corner_2D_HD.m21fm'⁴. This contains the basic hydrodynamic setup for the simple ABM example. Save the setup to a new file name 'Compare_Corner_PT_ABM.m21fm' to not overwrite the existing setup. Enable both the PT and the 'MIKE ECO Lab / Oilspill' modules on the 'Module Selection' page.

2.7 Loading a template

Now load the ABM template for the passive drifting particle class you have created. Open the 'Model Definition' page, select 'From File' and pick the MIKE ECO Lab template containing the 'PassiveDrifter' particle class from your disc. If successful loaded you should see that the summary lists one particle class and three forcing. Inspect the overview (compare Figure 2.11).

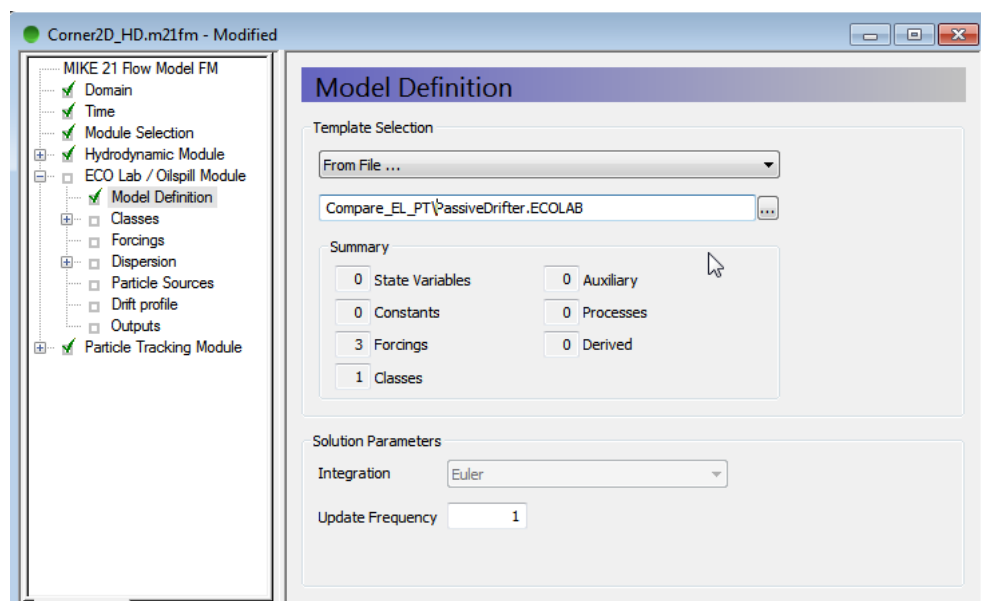


Figure 2.11 Setup overview, conservative state variable

2.7.1 The Eulerian framework

The Eulerian framework represents concentration type state variables, constants and forcing. Make sure that all utilised built-in constants and forcing are correctly handled; if the hydrodynamic engine cannot provide the proper information, the user has to supply the missing data! For further reference see the standard MIKE ECO Lab User Guide.

⁴ If the file is not available on your disc you can create a new setup using the specifications from 2.4

2.7.2 Class overview

The 'Classes' node allows you to inspect all defined particle classes. In our small example we have just defined one class (see Figure 2.12). The 'State Variables' node allows you to get an overview of the state variables defined by the active class. As every individual agent/particle has an own set of state variables, the presented information just includes the name and unit of the variables. Initial values of state variables have to be specified when particles are created, i.e. in the source definitions (see Particle sources, page 16).

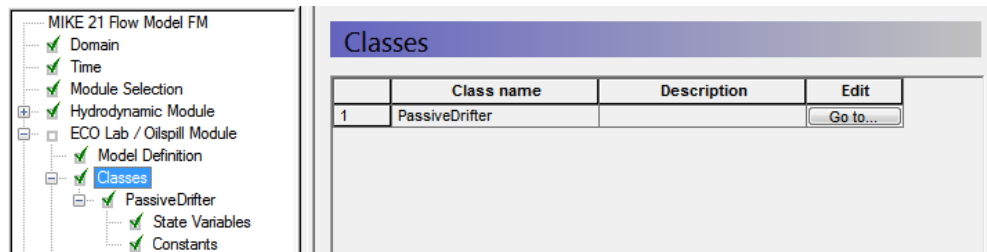


Figure 2.12 Overview of all defined particle classes

2.7.3 Specifying class constants

The value(s) of particle class constants are valid for all individuals of a particle class. They have to be specified in the 'Constants' node under the 'Classes' overview node.

In our example we use a class constant to specify the settling velocity. To modify the default value, move to the 'Constants' of the class (see Figure 2.13). Here, all the defined constants are listed and the user can set specific numeric values for the single class constants. Specify a settling velocity of $-1.4e^{-3}$ m/s. this will cause a slight positive buoyant particle, moving upward from the release depth (-5.04 m) to the surface in one hour.

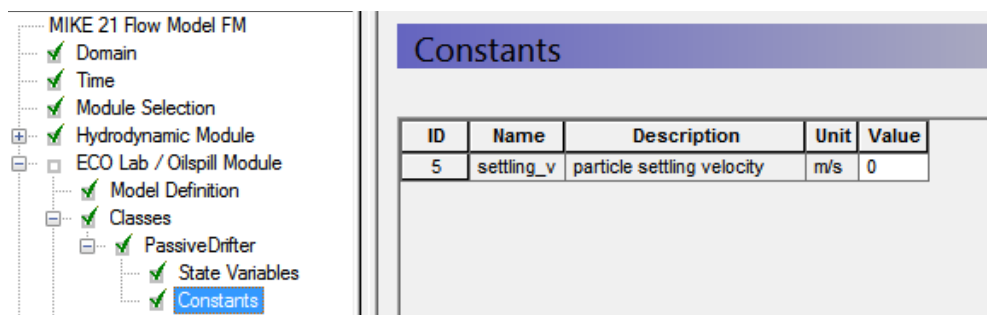


Figure 2.13 Parameterisation of class constants

2.7.4 Dispersion settings

We have declared the movement vector for our particle class in the template and specified the flow components as the sole driver in the movement definition. The created particle class is a simple passive drifting agent it simply moves with the local current flow.

If you want to add a random element (random walk) to the movement of an ABM agent/particle class it is easiest to use the built-in functionality of the hydrodynamic module⁵ via the dispersion settings. For details check the topic in the standard Particle Tracking User Guide.

To specify the dispersion settings for a particle class move to the 'Dispersion' node. In our example use 'Scaled Eddy viscosity formulation' for horizontal dispersion and 'no dispersion' for vertical dispersion (see Figure 2.14)

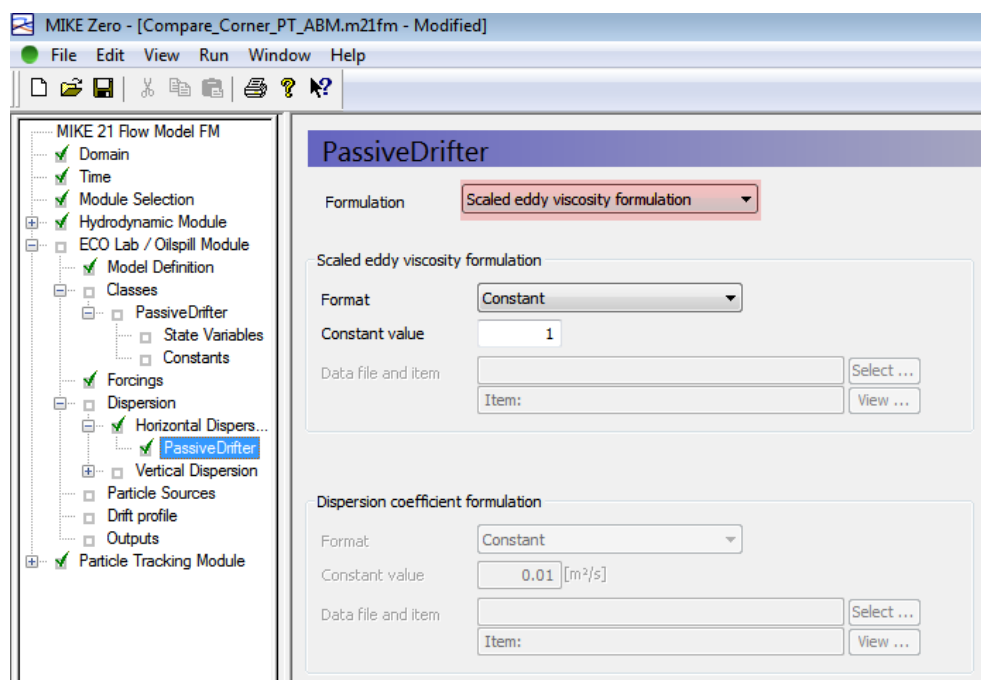


Figure 2.14 Horizontal dispersion settings

2.7.5 Particle sources

If particles/agents are not dynamically created, they must 'enter' a simulation using a particle source. A particle source is defined as a spatial location where new particles can be introduced to the model domain. You can specify the number of particles released within one time step and the initial values of their state variables. As particle constants cannot vary during the simulation time they have to be configured globally (see Creating class constants, page 11).

MIKE ECO Lab offers two principally different source types. 'Point sources' represent single point locations whereas 'Area sources' can describe spatial regions, where new particles are placed. Both types have subtypes; point sources can be stationary or moving

⁵ You can also implement an additional random walk as a movement vector in the EOC Lab template.

along a predefined path, area sources are always stationary and can describe a collection of multiply point sources or geometric shapes (area, line) defining the release location.

To specify a new particle source you can use the context menu of the geographic view on 'Particle Sources' page (see Figure 2.15) or the 'new source' button in the source list.

Try to add a new point source to the example setup.

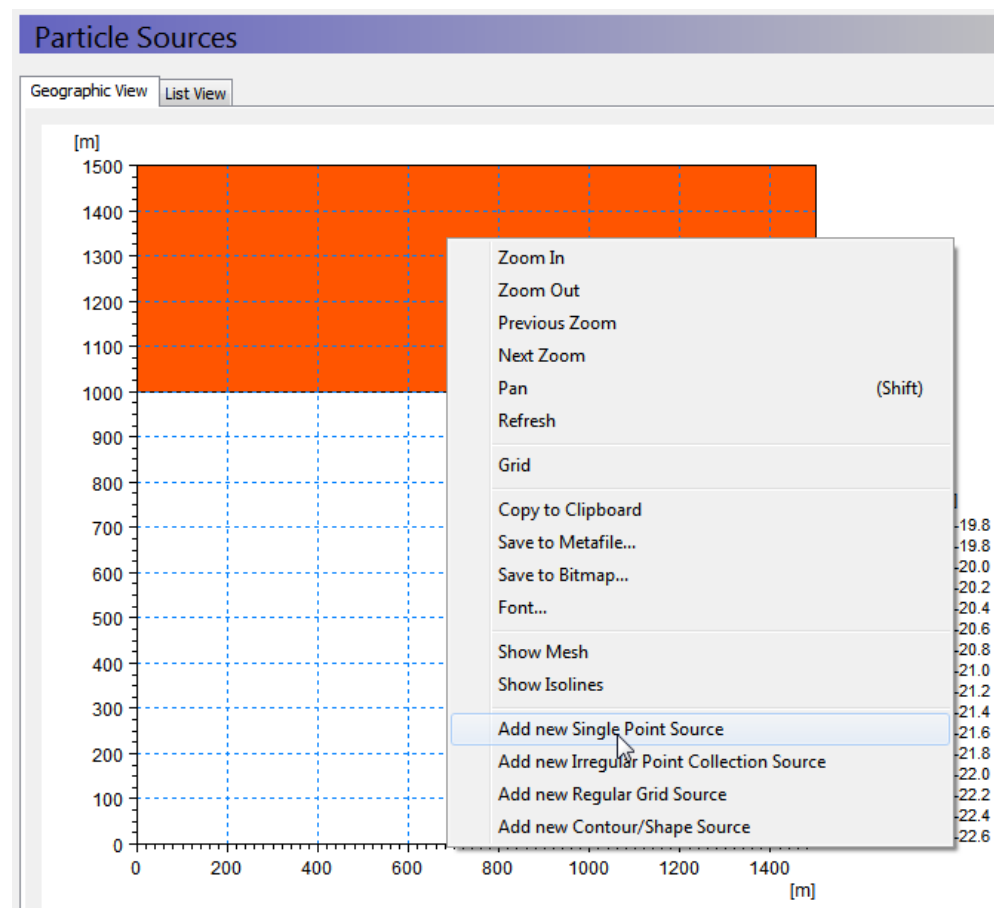


Figure 2.15 Source definition, location specification using the context menu (right mouse button) on the geographical overview.

Open the source details for the new created source (see Figure 2.16). We will use a moving point source, thus you have to specify the position to be read from a time series. Check that 'Point source' is selected as source type and 'Moving location' as source sub-type. This will enable the input fields to specify the source location data file. In the simulation directory you find a time series 'source_location.dfs0' that contains the information for a source moving from (1250,200,-5.04) to (1400,200,-5.04). Select the file and assign the proper items for the easting, northing and depth.

Do not forget to enable/include the particle class in the source definition on the bottom of the dialogue (Figure 2.17).

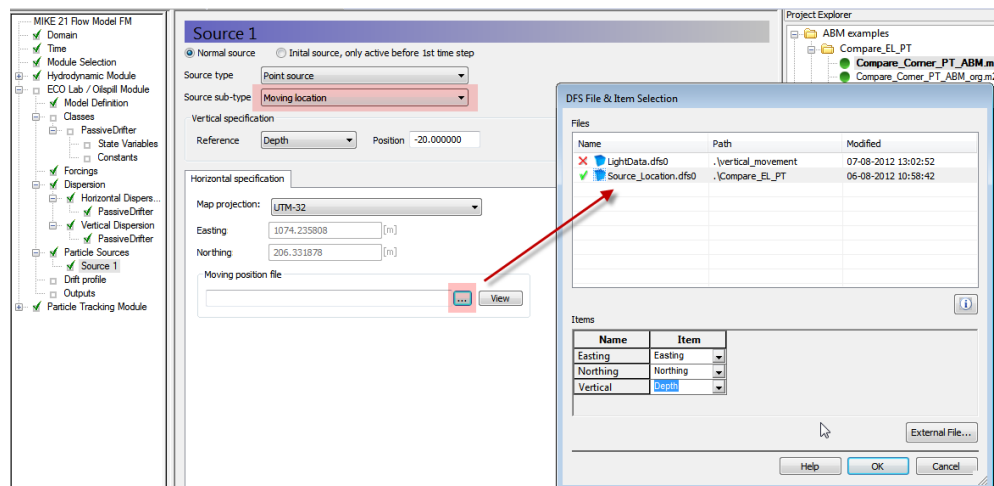


Figure 2.16 Moving source definition

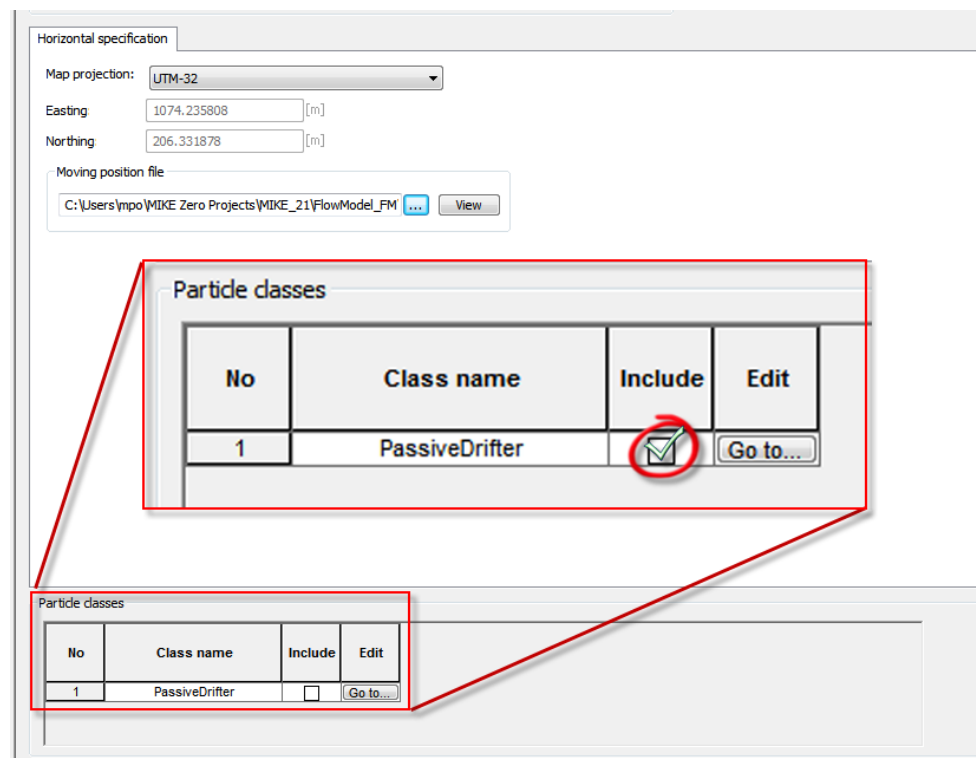


Figure 2.17 Do not forget to enable/include the particle class in source definition!

Now you have to configure the number of released particles per time step and the initial value of the state variable for these particles. Specify the number of released particles as 1 per time step. The dialogue will list all defined state variables and the currently chosen initial value. To modify the initial value jump the state variable dialogue using the 'Edit' button.

If the state variable is defined to be a mass (defined by the EUM type when you set up the template!) you can specify a total released amount that is distributed among all released particles. This is very useful if you want to adjust the number of release particles (as otherwise you have to recalculate the state variable amounts when you change to number of released particles). Further it is possible to set a flag that the specified value is actually

a flux per second. Using that option the total amount will not change if you change the time step. See Figure 2.18 for actual settings.

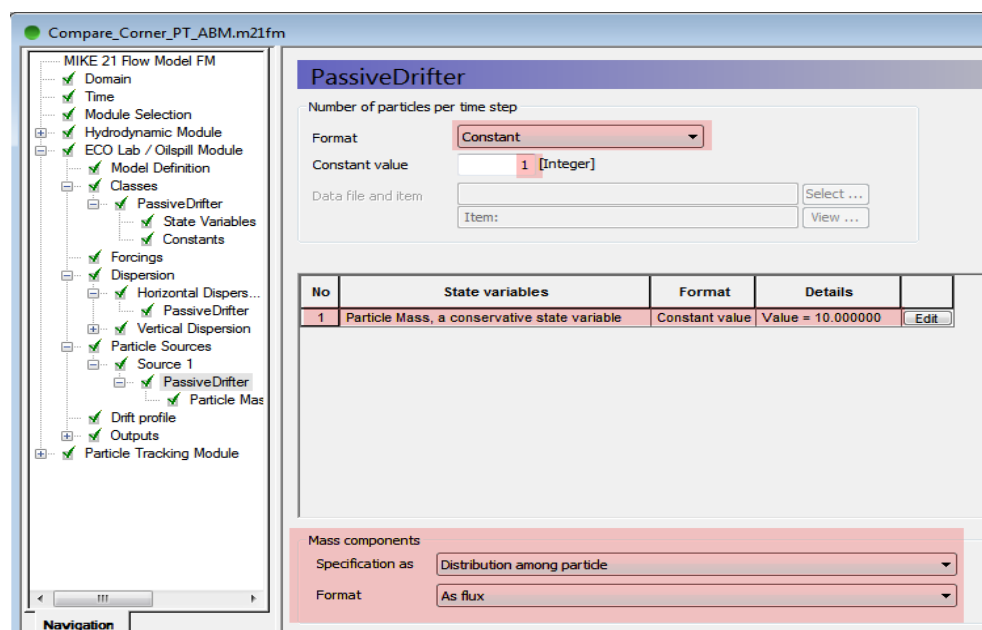


Figure 2.18 Source definition, specification of released particles and settings

2.7.6 Outputs mapping particle state variables into concentration maps

We will create two principally different types of outputs, one map output and a particle track output. The latter is a XML data file containing the information on individual particles (their position, state variables and properties) whereas the map file is a spatial representation where state variables from all particles are mapped spatially as a concentration map.

Create two new output files and name the first 'ABM Map' and the last 'ABM Track'. Open the specification for the 'ABM Map'. As 'Field type' select '2D (horizontal)', set the output format to 'Area series'. Provide a proper file name ('ABM_Map.dfsu'⁶). For simplicity reason we will include all time steps and use an output frequency of 1. See Figure 2.19.

⁶ If you change the output format and move away from the input field the proper file extension will be set for the file name!

ABM Map

Geographic View | **Output specification** | Output items

Data

Field type: 2D (horizontal) ▼

Output format: Area series ▼

Output file: ABM Map.dfsu

Treatment of flood and: Only real wet area ▼

Time step

First: 0 Last: 180 Frequency: 1

Figure 2.19 Output specification

To specify the information written to the result file, switch to the 'Output Items' page.

The output item specification lists all available MIKE ECO Lab elements⁷. You can include or exclude single elements by the checkbox in the list view. In the lower left corner a quick setting dialogue allows you to include/exclude output items of a defined output category (see Table 2.4) with a single mouse click. Please note that this setting is a tri-state dialogue, allowing you to include (checked) or exclude (unchecked) an item category completely. If some items from a category are manually modified, the dialogue shows an intermediate (tri-state) symbol.

⁷ The available items depend on the output type (2D/3D) and the spatial variability / scope settings inside the ECO Lab template for an item.

ABM Map

Geographic View | Output specification | Output items

No	Variable	Include	Write	Handle data
1	Suspended, PassiveDrifter-Particle Mass, a conservative sta	<input checked="" type="checkbox"/>	Current value	Default
2	Sedimented, PassiveDrifter-Particle Mass, a conservative sta	<input type="checkbox"/>	Current value	Default
3	In specified Z-Range, PassiveDrifter-Particle Mass, a conser	<input type="checkbox"/>	Current value	Default
4	U velocity	<input checked="" type="checkbox"/>	Current value	Default
5	V velocity	<input checked="" type="checkbox"/>	Current value	Default
6	Surface elevation	<input checked="" type="checkbox"/>	Current value	Default
7	Still water depth	<input checked="" type="checkbox"/>	Current value	Default
8	Total water depth	<input checked="" type="checkbox"/>	Current value	Default

Enable/disable all

☐ State variables
☐ Additional/derived output
☒ Hydraulic variables

Z-Range specification

Include particles within

Upper Z-Range:

Lower Z-Range:

Figure 2.20 Output item selection

Depending on the item category and the output type you can select in the 'WRITE' field that various statistic information or the 'current value' is written to the result files. If the output item is declared as mass/concentration item in the MIKE ECO Lab template (EUM type/Unit), the 'default value' will be the accumulated concentration, for non-mass/concentration items the default will be the average cell value. For a list of output write options see Table 2.2.

You can further force the model to handle/convert the raw data as/to a mass, area or volume concentration by specifying a handling option manually. See Table 2.3 for a list of options.

Table 2.2 Output item write options

Write	Explanation
Current value	Accumulated value for mass/ concentration items, cell average for all other item types
Min Value	Minimum value during output time different from zero
Max Value	Maximum value during output time
Time Average	Time average value for output time
Cell Average	Average cell value for current time step
Arrival time	Replaces the actual value with the arrival time, i.e. the first time step a particle entered a cell

Please note that an item can just appear once in the output file. It is not possible to write the min and max value to the same output file.

Table 2.3 Output item handling options

Handle data	Explanation
Default	Accumulated value for mass/ concentration items, cell average for all other item types
As mass	Accumulated value
As area concentration	Accumulated value divided by element area
As volume concentration	Accumulated value divided by element volume


Table 2.4 Output item categories for map outputs

Category	Explanation
State variables	MIKE ECO Lab state variables from the Eulerian framework (concentration variables)
Additional/ derived outputs	Auxiliary variables, process and derived outputs from the Eulerian framework
Hydraulic variables	Information from the hydrodynamic core, e.g. current information etc.
Suspended state variables	State variables from suspended particles mapped as concentrations
Suspended derived outputs	Arithmetic expressions from suspended particles mapped as concentrations
Sedimented state variables	State variables from sedimented particles (based on sedimentation flag) mapped as concentrations
Sedimented derived outputs	Arithmetic expressions from sedimented (based on sedimentation flag) particles mapped as concentrations
z-range state variables	State variables from particles within the specified Z-range mapped as concentrations
z-range derived outputs	Arithmetic expressions from particles within the specified Z-range mapped as concentrations

2.7.7 Outputs storing particle movement tracks

The second output is used to store the particle track, the detailed information on particle positions, state variables etc. as a XML file.

Set the output field type to 'Particle Track' and include all time steps and particles (see Figure 2.21). By default the track will be stored as compressed particle track. This compressed format reduces the memory constraints of the track file on the disc. If you plan to post-process track data using 3rd party tools it is advised to store the information 'uncompressed'⁸.

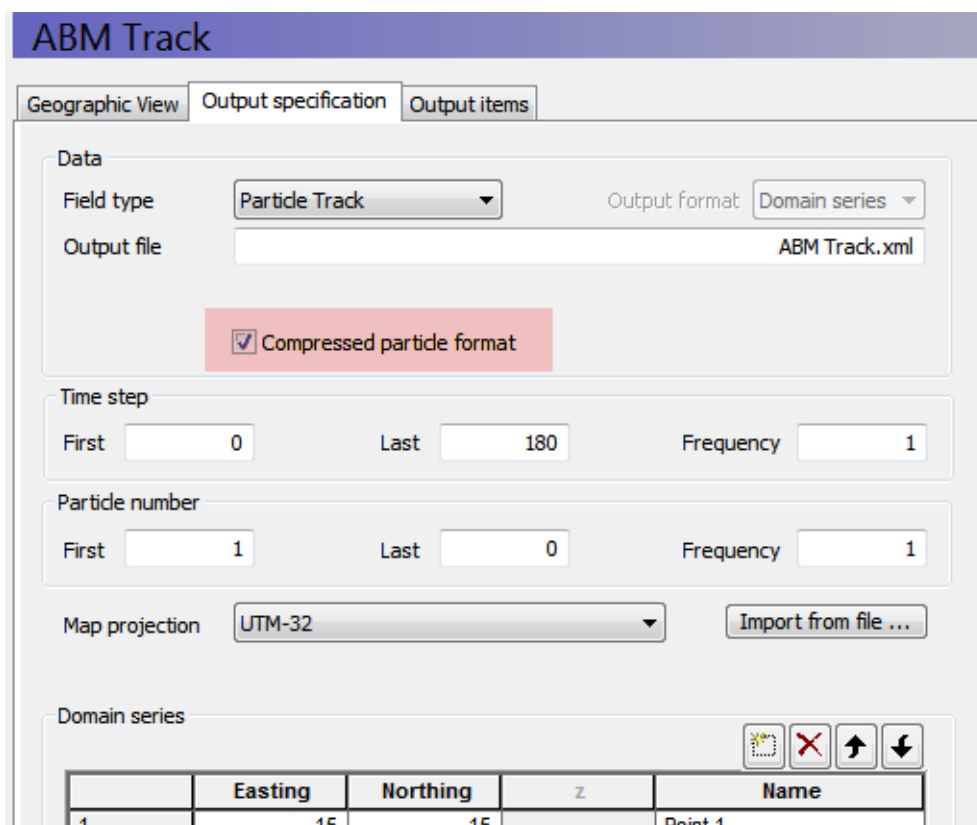

The screenshot shows the 'ABM Track' configuration window with three tabs: 'Geographic View', 'Output specification' (selected), and 'Output items'. The 'Output specification' tab contains the following settings:

- Data:**
 - Field type: Particle Track (dropdown)
 - Output format: Domain series (dropdown)
 - Output file: ABM Track.xml
 - ☒ Compressed particle format
- Time step:**
 - First: 0
 - Last: 180
 - Frequency: 1
- Particle number:**
 - First: 1
 - Last: 0
 - Frequency: 1
- Map projection:** UTM-32 (dropdown) with an 'Import from file ...' button.
- Domain series:** A table with columns: Easting, Northing, z, and Name. The first row shows values: 1, -15, -15, and Point 1.

Figure 2.21 Particle track specification

Open the output item page and select the outputs to be included in the track result file. The particle position (x, y, z coordinates) is always stored and additional items can be included / excluded. There is a similar quick-selector as in the map output but as the track stores different information the categories are slightly different (see Table 2.5)

⁸ Check the ECO Lab User Guide for a detailed format description of the XML file

Table 2.5 output categories for particle tracks

Category	Explanation
State variables	Particle state variables
Additional/ derived outputs	Arithmetic expressions
Properties	Particle properties

2.7.8 Model setup of PT module

As we want to compare the passive drifting ABM agent and the standard particle tracking we have to specify a particle tracking setup corresponding to the ABM setup. Open the 'Particle Tracking Module' and create a new particle class. Make sure that 'kilogram' is selected as EUM unit (see Figure 2.22)

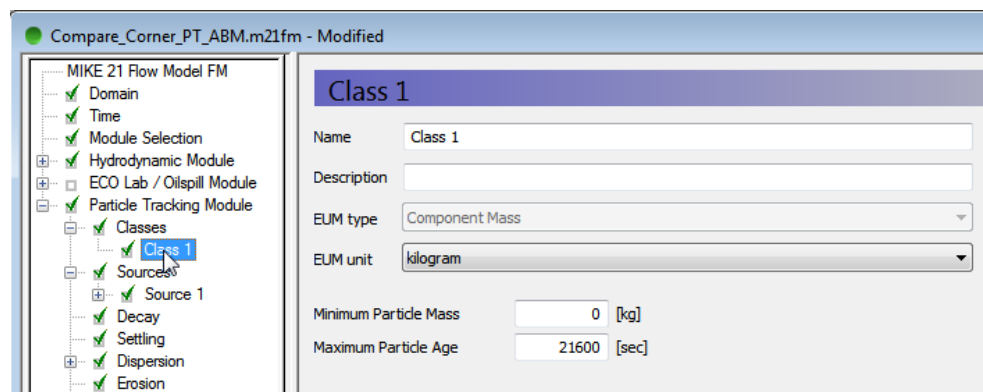


Figure 2.22 Definition of a particle class in the Particle Tracking module

Add a new particle source with the same parameters (source type, location) as in the MIKE ECO Lab particle source. Configure the source according to Figure 2.23.

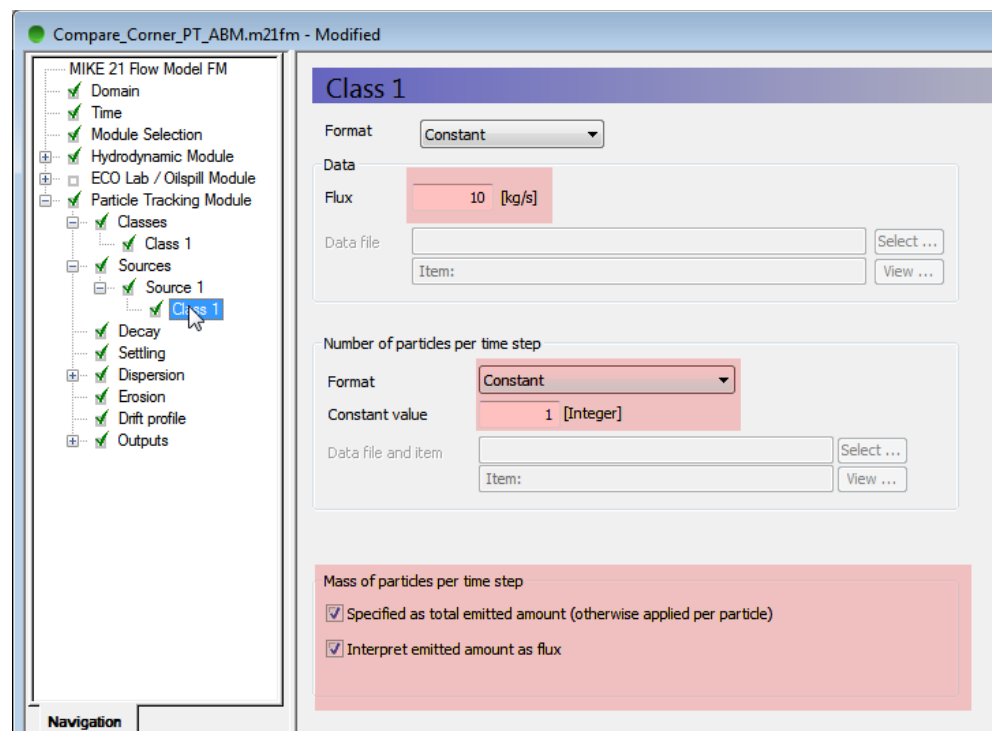


Figure 2.23 Definition of the source in the Particle Tracking module

Set up two outputs: one as 2D output, the other as track output, analogous to the outputs in the MIKE ECO Lab module (NOTE: the particle tracking module does not provide the same output features as the MIKE ECO Lab ABM module).

2.8 Results

After you have run the model you can inspect the simulation results. Open the 'concentration' map from the MIKE ECO Lab module. This result type shows the particle distribution based on a mapping of the particle state variables into concentrations. This result type is not different from any other MIKE result.

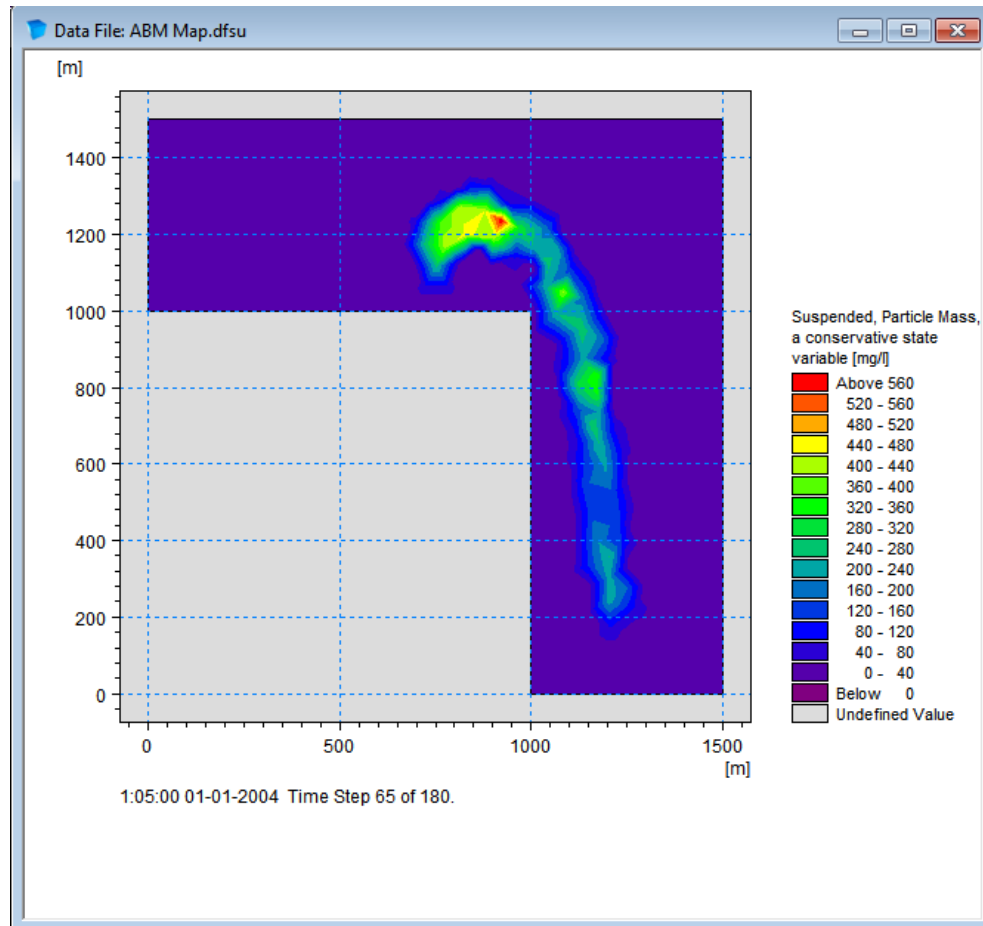


Figure 2.24 Resulting concentration map output for the particle class after 65 time steps

To display the information stored as the particle track you have to add a particle overlay to the result display. Use the context menu on the display area and select 'Add/Remove Layers' (see Figure 2.25)

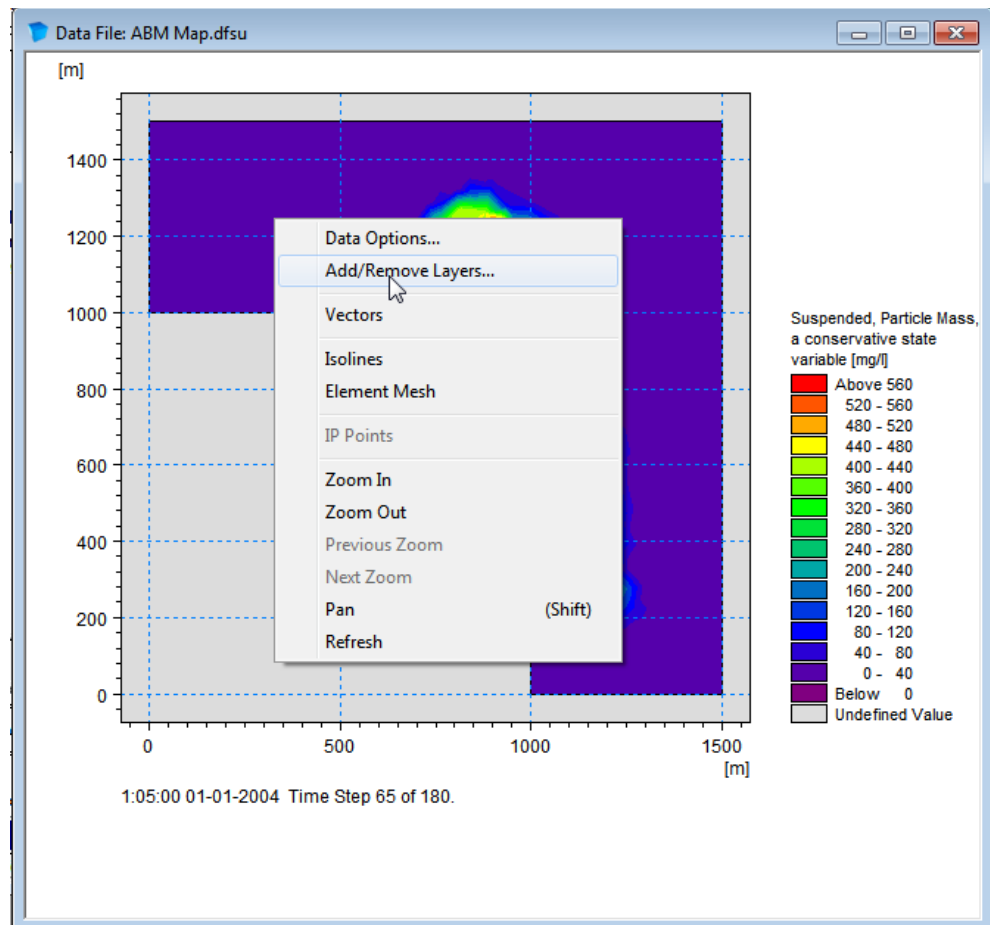


Figure 2.25 Adding a particle track overlay

Create a new overlay and select 'Particle File' as file type. Use the 'browse' icon to select a proper XML particle track. Try to load in the ABM particle track.

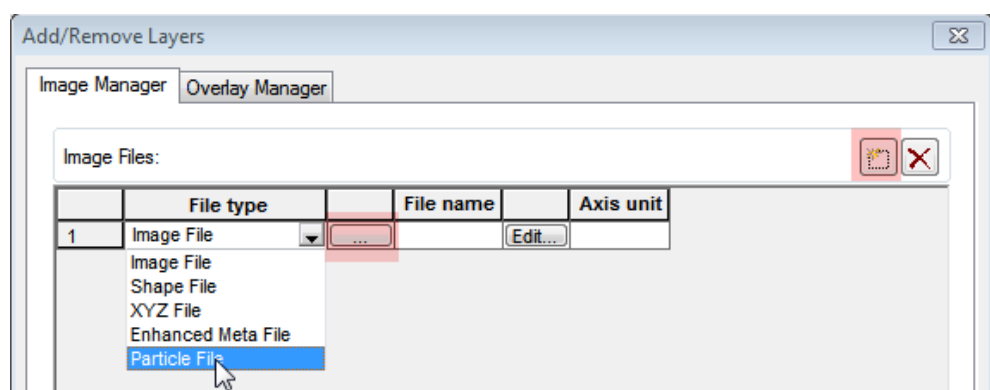


Figure 2.26 Selecting a particle track file to add a particle overlay to a plot

When the selected XML file contains a valid particle track, the track is loaded into memory and the track data is drawn as overlay on the current track. The screen should now look similar to Figure 2.27.

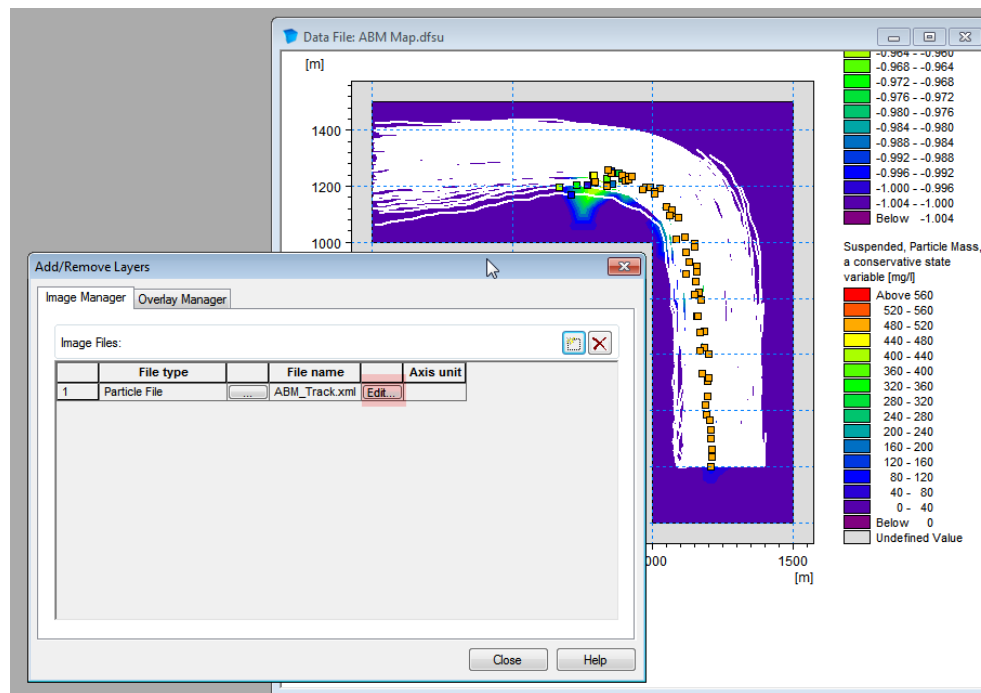


Figure 2.27 Loaded particle track overlay

The default track overlay shows the path of all particles drawn as white lines from their origin to the end of the simulation. Particles are represented as geometric shapes/markers and their colour represents the particles z-coordinate.

2.8.1 Adjusting the track overlay

A particle track overlay can be adjusted in many ways. Use the 'Edit' button in the 'Add/Remove Layer' dialogue. The first option 'Particle Track Overlay' (see Figure 2.28) allows you to modify the lines drawn to represent the particle path according to the specified line width, style and colour. The 'Track length' allows you to specify that the path shows all time steps ('Total'), just to the current time step (path from release location to current location) or just the last n positions/time steps ('Current with tail').

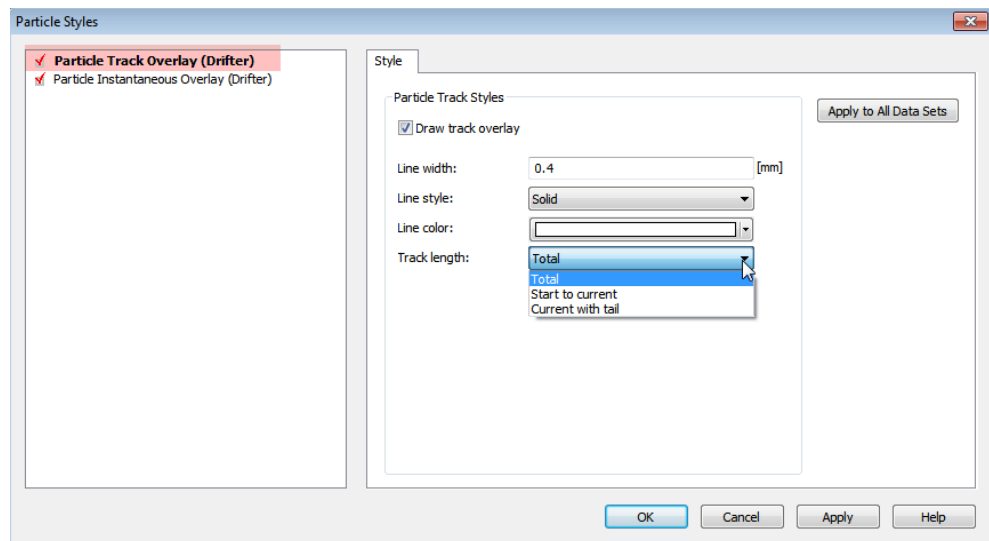


Figure 2.28 Particle track overlay dialogue

The instantaneous overlay specifies the drawing of the shapes. You can specify any track item used to control the colour and size of a symbol, as well as select a symbol shape.

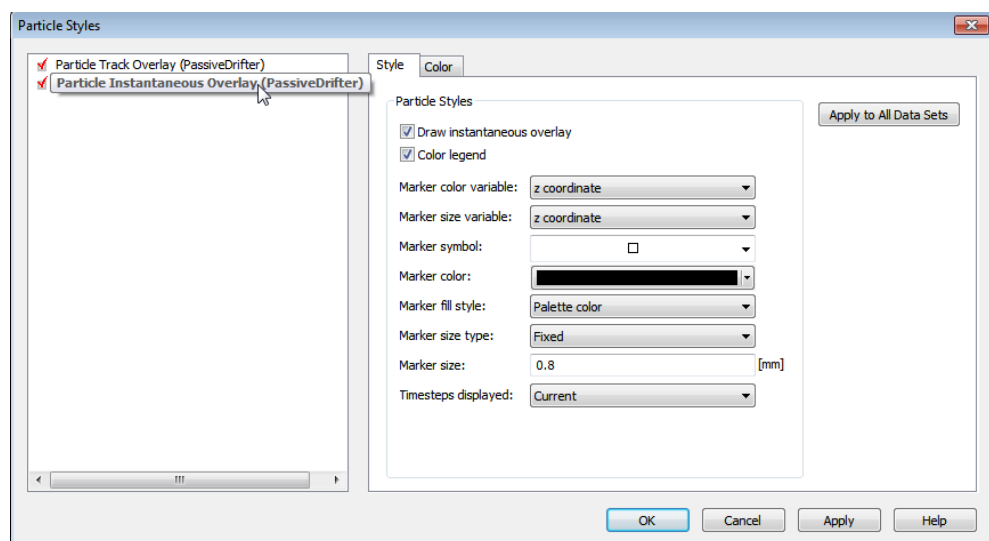


Figure 2.29 Particle track instantaneous overlay

Common visualisation options:

Change the size of a marker according to a variable:

- Select the output variable to control the size as 'Marker size variable'
- Set 'Marker size type' to 'variable'
- Set a scaling factor 'Marker size'

Change the colour of a marker to match a variable:

- Set the control variable 'Marker color variable'
- Set 'Marker fill style' to 'Palette color'

Apply a uniform marker colour:

- Select colour 'Marker color'
- Set 'Marker fill style' to 'Solid color' for a filled marker 'White' to draw a white shape with colour border
- 'Transparent' to draw just the colour border

Now we can do a comparison of the final results. Add another overlay for the particle track from the particle tracking module (2D concentration mapping is based on the results of the ABM model and will not show the particles from the PT module!). Adjust the colours and styles of the two overlays to be able to separate them visually. Use the 'current with tail' option to draw the particles trajectories. The final plot should look similar to Figure 2.30.

When you compare the traces, both the passive drifting ABM particle class and the standard particle tracking produce comparable tracks. The individual tracks are slightly different as there is a random walk contribution due to the dispersion settings. If you switch off horizontal dispersion for both MIKE ECO Lab and the particle tracking module you will see that the tracks from both modules will be identical.

Why use an MIKE ECO Lab ABM then? We have not specified any decay for the state variable but it is now quite simple to add e.g. a decay process. Thus you can easily apply any decay function (1st order, 2nd order, dependent on light or other inhibition function etc.) with a functionality the classic particle tracking does not allow. Further you can enhance the movement rules to simulate 'biological' behaviour. We will explore these opportunities in the next chapters.

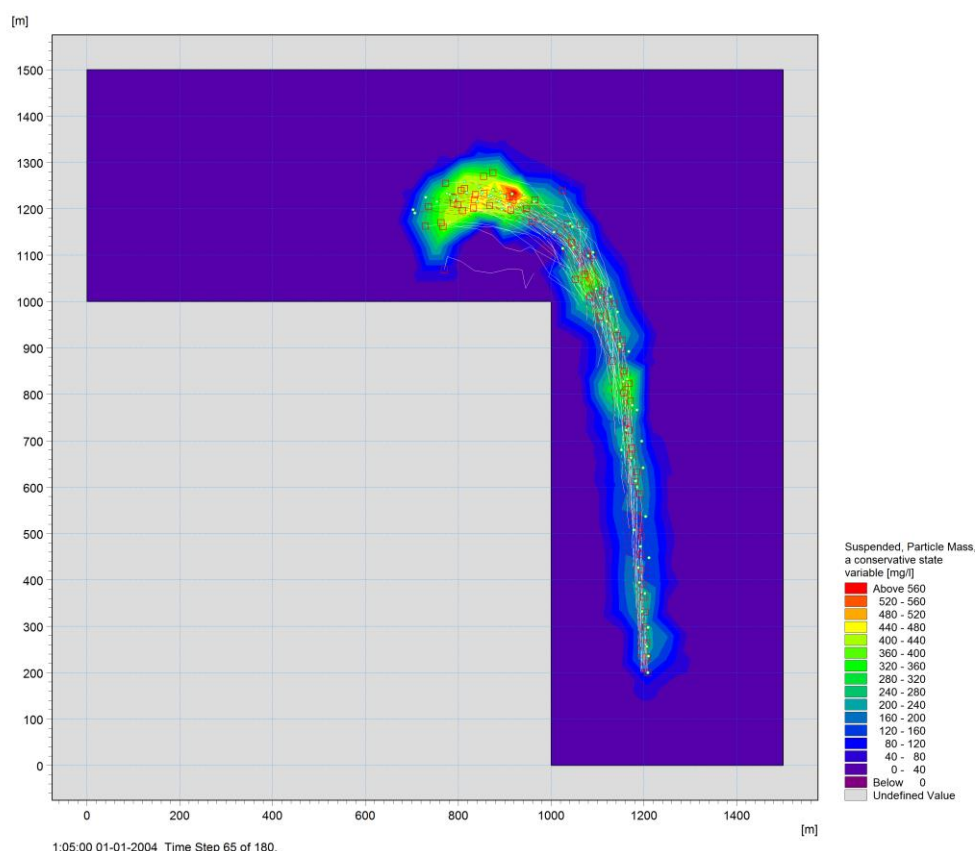


Figure 2.30 Final results comparing MIKE ECO Lab ABM a track (while, square markers) and a standard particle tracking (red, dotted path, filled circle markers) with the same properties